

---

# **magicolor<sup>®</sup> 2200**

## **DeskLaser**

### **User's Guide**

---

**1800622-001A**

---

## Trademarks

The following are registered trademarks of MINOLTA-QMS, Inc.: QMS, the MINOLTA-QMS logo, and magicolor.

Minolta is a trademark of Minolta Co., Ltd. Other product names mentioned in this manual may also be trademarks or registered trademarks of their respective owners.

## Proprietary Statement

The digitally encoded software included with your printer is Copyrighted © 2000 by MINOLTA-QMS, Inc. All Rights Reserved. This software may not be reproduced, modified, displayed, transferred, or copied in any form or in any manner or on any media, in whole or in part, without the express written permission of MINOLTA-QMS, Inc.

## Copyright Notice

This manual is Copyrighted © 2000 by MINOLTA-QMS, Inc., One Magnum Pass, Mobile, AL 36618. All Rights Reserved. This document may not be copied, in whole or part, nor transferred to any other media or language, without written permission of MINOLTA-QMS, Inc.

## Manual Notice

MINOLTA-QMS, Inc. reserves the right to make changes to this manual and to the equipment described herein without notice. Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, MINOLTA-QMS, Inc. makes no warranty of any kind including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose with regard to this manual. MINOLTA-QMS, Inc. assumes no responsibility for, or liability for, errors contained in this manual or for incidental, special, or consequential damages arising out of the furnishing of this manual, or the use of this manual in operating the equipment, or in connection with the performance of the equipment when so operated.

## Registering the Printer

**Mail**—Fill out and send in the registration card enclosed in your shipment.

**Internet**—[www.minolta-qms.com/support/prodreg](http://www.minolta-qms.com/support/prodreg) (US only)



---

# Contents

---

## 1 Replacing Consumables

<b>Consumable Life Expectancies .....</b>	<b>2</b>
<b>Replacing Consumables .....</b>	<b>2</b>
Ordering Consumables 3	
<b>Replacing Toner Cartridges .....</b>	<b>3</b>
Toner Cartridge Life 4	
Toner Cartridge Handling 5	
Toner Cartridge Replacement 5	
Refilled Toner Cartridges 7	
<b>Replacing the OPC Drum, Laser Lens Cover, and Waste Toner Pack .....</b>	<b>8</b>
Removing the Used Waste Toner Pack 9	
Removing the Used OPC Drum Cartridge 12	
Removing and Installing the Laser Lens Cover 13	
Installing the New OPC Drum Cartridge 14	
Installing the New Waste Toner Pack 16	

---

<b>Replacing the Fuser Unit and Transfer Roller Kit .....</b>	<b>17</b>
Replacing the Fuser Unit 17	
Replacing the Transfer Roller Unit 21	
<b>Replacing the Fuser Oil Roller .....</b>	<b>24</b>
<b>Replacing the Transfer Belt .....</b>	<b>26</b>

## 2 Using Media

<b>Introduction.....</b>	<b>34</b>
<b>Media Handling.....</b>	<b>34</b>
<b>Media Types .....</b>	<b>35</b>
Plain Paper 35	
Letterhead and Memo Media 35	
Thick Stock 36	
Envelopes 37	
Labels 37	
Postcards 38	
Transparencies 38	
<b>Loading Media .....</b>	<b>40</b>
Autoduplexing 40	
Upper and Optional Media Trays 41	
Multipurpose Tray 44	
Printing Envelopes from the Multipurpose Tray 46	
Printing Area 47	
<b>Media Storage .....</b>	<b>47</b>

## 3 Printer Driver Configuration

<b>Introduction.....</b>	<b>50</b>
<b>Configuring the Printer Driver .....</b>	<b>50</b>
Windows Me/98/95 Configuration Methods 50	
Windows 2000/NT 4.0 Configuration Methods 52	

<b>32-bit SuperDriver Setup .....</b>	<b>55</b>
Printer Driver Controls for Windows Me/2000/NT4/98/95	55
Configuring Paper Options	56
Configuring Page Layout Options	63
Configuring Image Options	70
Configuring Device Options	74
Information on the About Tab	75
<b>Sharing the Printer .....</b>	<b>75</b>
<b>Using the Crown Print Monitor .....</b>	<b>76</b>
Components	76

## 4 Maintaining the Printer

<b>Introduction.....</b>	<b>80</b>
<b>Printer Care.....</b>	<b>80</b>
<b>Cleaning .....</b>	<b>82</b>
<b>Updating System Software.....</b>	<b>83</b>
Downloading Methods	83
System File	83
Downloading the System File via Ethernet (TCP/IP)	84
Downloading the System File via Parallel	87
<b>Future Updates.....</b>	<b>88</b>

## 5 Troubleshooting

<b>Introduction.....</b>	<b>90</b>
<b>Printing a Sample Page .....</b>	<b>90</b>
<b>Preventing Media Jams .....</b>	<b>90</b>
<b>Automatic Jam Recovery .....</b>	<b>91</b>
<b>Understanding the Media Path.....</b>	<b>92</b>
Media Tray	92
Multipurpose Tray	93
Duplex Unit (optional)	93
5-bin Mailbox (optional)	93

<b>Clearing Media Jams .....</b>	<b>94</b>
Handling Media Jams by Location	94
Clearing Misfeed (Upper or Optional Tray) Jams	95
Clearing Misfeed (Multipurpose Tray) Jams	96
Clearing Inner Jams, Outer Jams, and Drum Jams	97
Clearing Jams from the Output Tray	104
<b>Solving Problems with Media Jams .....</b>	<b>105</b>
<b>Solving Other Problems .....</b>	<b>107</b>
<b>Solving Problems with Printing Quality .....</b>	<b>111</b>
<b>Status, Error, and Service Messages .....</b>	<b>121</b>
Status and Error Messages	122
Service Messages	126
<b>Additional Assistance .....</b>	<b>127</b>

## 6 Installing Other Accessories

<b>Introduction.....</b>	<b>130</b>
<b>Installing a Lower Feeder Unit (LFU) .....</b>	<b>130</b>
<b>Installing a Duplex Unit .....</b>	<b>136</b>
<b>Installing an Optional 5-bin Mailbox.....</b>	<b>142</b>
<b>BuzzBox .....</b>	<b>148</b>
What's in the Kit?	149
Installing BuzzBox	149
Using BuzzBox	150
<b>Antistatic Protection .....</b>	<b>151</b>
<b>Dual In-Line Memory Module .....</b>	<b>151</b>
Installation	152
<b>Media Trays.....</b>	<b>153</b>
<b>Crown Conversion Kit.....</b>	<b>153</b>
<b>Printer Stand/Cabinet .....</b>	<b>153</b>

## 7 CrownView

<b>CrownView .....</b>	<b>156</b>
<b>Setting up the Printer Web Page .....</b>	<b>157</b>
Determining the Printer Name 157	
Setting Up Your Browser Software 157	
<b>Printer Summary Page .....</b>	<b>161</b>
<b>Consumable Status Page .....</b>	<b>162</b>
<b>Engine Page .....</b>	<b>163</b>
<b>Mail Page .....</b>	<b>164</b>
<b>Network Page .....</b>	<b>165</b>
<b>SNMP Page .....</b>	<b>166</b>

## 8 Repacking the Printer

<b>Storing the Printer .....</b>	<b>168</b>
<b>Relocating Your Printer .....</b>	<b>168</b>
<b>Repacking the Printer .....</b>	<b>169</b>
What's Involved? 169	
Remove the Cables 170	
Remove the Fuser Oil Roller 170	
Remove the Toner Cartridges 170	
Remove the Waste Toner Pack 171	
Remove OPC Drum Cartridge 171	
Remove Transfer Belt 171	
Remove the Duplex Unit 171	
Remove the 5-bin Mailbox 171	
Remove the Lower Feeder Unit 172	
Repack the Printer 173	

## A Technical Specifications

<b>Requirements .....</b>	<b>176</b>
Space Requirements 176	
Power Requirements 177	
Location Requirements 177	

**Engine and Controller Specifications .....180**  
    Engine 180  
    Print Speed—Simplex 180  
    Print Speed—Autoduplex 180  
    General 181  
    Controller 181  
    Electrical 182  
    Environmental 183  
    Physical 184  
**Print Media .....184**

**Index**





---

# *Replacing Consumables*

---

1

# Consumable Life Expectancies

The stated life expectancy of each consumable is based on printing under specific operating conditions, such as media type, number of color planes, page size, and page coverage (@ normal 5% coverage of letter/A4-size media). The actual life expectancy will vary depending on these and other printing variables, including continuous or intermittent printing, higher than normal coverage, ambient temperature, and humidity.

## Replacing Consumables

### Attention

**Failure to follow instructions as outlined in the *User's Guide* could result in voiding your warranty.**

The following messages indicate that a consumable needs to be replaced:

Item/Message Display	This item needs replacing by user after...	Page Reference
Fuser oil roller REPLACE OIL ROLLER	FUSER OIL LOW, FUSER OIL EMPTY, or REPLACE OIL ROLLER displays in the message window (after up to 21,000 single-sided continuous monochrome or 7,500 continuous color pages, or 7,000 intermittent monochrome or 5,000 intermittent color pages). Heavy coverage, intermittent printing, and different media types can use up oil at an accelerated rate, reducing fuser oil roller life.	"Replacing the Fuser Oil Roller" on page 24
Fuser unit/transfer roller kit REPLACE FUSER UNIT	100,000 single-sided pages maximum at an equal mix of black and 4-color pages, all with 5% coverage of each color; however, fuser unit life is coverage and media dependent).	"Replacing the Fuser Unit and Transfer Roller Kit" on page 17
OPC drum kit (OPC drum, laser lens cover, waste toner pack) REPLACE OPC DRUM REPLACE WASTE TONER WASTE TONER NEAR FULL	Up to 30,000 continuous monochrome or 7,500 continuous four-color pages, or 10,000 intermittent [one-page jobs] monochrome or 5,000 intermittent [one-page jobs] color pages. Other factors also affect OPC drum kit component life.	"Replacing the OPC Drum, Laser Lens Cover, and Waste Toner Pack" on page 8

Item/Message Display	This item needs replacing by user after...	Page Reference
Toner <COLOR> TONER EMPTY	Approximately 6,000 single-sided pages per cartridge—black, yellow, magenta, cyan at 5% coverage of each color.	"Replacing Toner Cartridges" on page 3
Transfer belt REPLACE TRANSFER BELT	100,000 single-sided images (1:1 color/monochrome printing).	"Replacing the Transfer Belt" on page 26

\*A **plane** (also called an **image**) is a single **pass** of the OPC drum (one toner color). For example, a black-only, single-sided (simplex) print job makes one pass, and a two-color (duplex) print job makes four passes. A single-sided color **page** (also called a **face**) consists of four passes of the OPC drum, since most color print jobs use all four toner colors. A two-sided color page may consist of up to eight passes of the OPC drum, since most color print jobs use all four toner colors. Stated consumable life is expressed at 5% in simplex letter/A4 pages. A duplex page is equivalent to two simplex pages.

The number of sheets/faces printed shown on the startup page differs from the number of sheets/faces printed statistics in CrownView. The numbers on the startup page refer to number of sheets/faces printed during the lifetime of the printer. The numbers in CrownView refer to the number of sheets/faces printed to date during the current consumables tracking period.

## Ordering Consumables

Choosing the right consumables for your magicolor 2200 DeskLaser printer not only increases its reliability and performance, but also minimizes the risk of damage.

For example, only MINOLTA-QMS toner cartridges are designed to meet the exact specifications of your MINOLTA-QMS printer, giving maximum performance, efficiency, and long life.

Toner cartridges and other consumables for the magicolor 2200 DeskLaser are available from your local vendor or Q-SHOP ([www.q-shop.com](http://www.q-shop.com)). See the *Service & Support Guide* for the telephone number of the MINOLTA-QMS office nearest you for information on ordering.

## Replacing Toner Cartridges

Characters and images are created in your laser printer through a process that applies toner to the photosensitive (OPC) drum (which functions like photographic film). Your printer

uses four toner cartridges: black, yellow, magenta, and cyan. Handle the toner cartridges carefully to avoid spilling toner inside the printer or on yourself.



*The carbon-particle toner is nontoxic. If you get toner on your hands, wash them in cool water or a neutral detergent. If you get toner on your clothes, lightly dust them off as much as possible. If some toner remains on your clothes, use cool, not hot water, to rinse the toner off, provided your clothing is washable.*

## **Attention**

---

**If you get toner in your eyes, wash it out immediately and consult a doctor. Material Safety Data Sheets (MSDS) information can be found at [www.minolta-qms.com](http://www.minolta-qms.com) (click on the Answer Base).**

---

## **Toner Cartridge Life**

A toner cartridge contains enough toner (yellow, magenta, cyan, or black) to print a maximum of 6,000 (@ normal 5% page coverage) letter/A4-size pages.

When toner runs low in a cartridge, **X TONER LOW** displays in the message window (**X** indicates the toner color). It's your option whether to continue printing; usually, parts of the page print lighter.


When toner is low, it's sometimes helpful to take the cartridge out of the printer and redistribute the toner by gently rocking the cartridge horizontally side to side (as you do for a new cartridge) five or six times. Then reinstall the cartridge.

The printer, approximately 100 pages after detecting that toner in a cartridge is low, displays **X TONER EMPTY** in the message window (**X** indicates the toner color). Printing continues even though the out-of-toner warning appears. However, the color gradually fades, so replace the toner cartridge as soon as possible.

## Toner Cartridge Handling

### Attention

**Do not hold a toner cartridge vertically. Do not touch the toner roller surface ① or the protective shutter ②. This could lower image quality.**

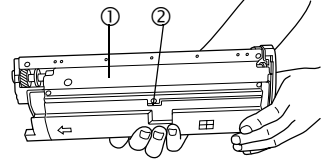

Keep toner cartridges:

- In their packaging until you're ready to install them
- In a cool, dry location away from sunlight (due to heat)

*The maximum storage temperature is 95° F (35° C) and the maximum storage humidity is 80% without condensation.*

- Level during storage

*Do not stand or store cartridges on their ends or turn them upside down; the toner inside the cartridges may become caked or unequally distributed.*

- Away from salty air and corrosive gases such as aerosols
- Away from disk drives and floppy disks

*The magnets in the cartridges can damage stored data.*

## Toner Cartridge Replacement

- 1 Check the message display to see what toner color is out.
- 2 Open the printer's front cover.

### Attention


**Be careful not to spill toner on the inside of the printer's front cover. Toner will fall from there into the upper media tray. If toner does fall onto the open cover, immediately wipe it with a dry, lint-free soft cotton cloth or swabs.**

*If the toner cartridge you want to replace is the one showing, go to step 5. If not, go to step 3.*



- 3** Press the toner cartridge carousel button ① and release the button ② before turning the carousel dial ③ counterclockwise until it stops.


*The carousel rotates 90° and stops.*

*The toner cartridge carousel may start to turn automatically from the weight of the inserted toner cartridge. Make sure you have fully turned to the next slot before trying to insert another toner cartridge.*

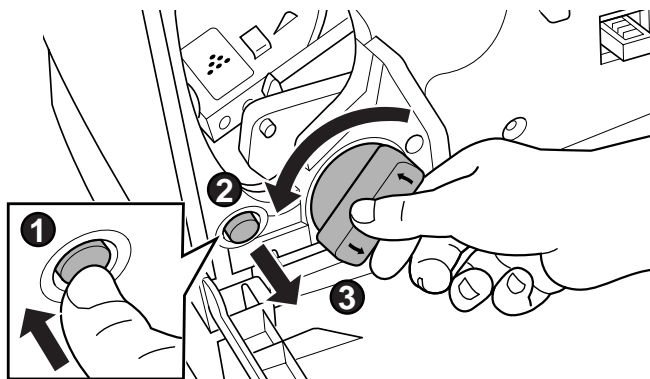

- 4** Repeat step 3 until the color to be replaced is visible.
- 5** Pull the release lever to eject the toner cartridge you are going to replace.

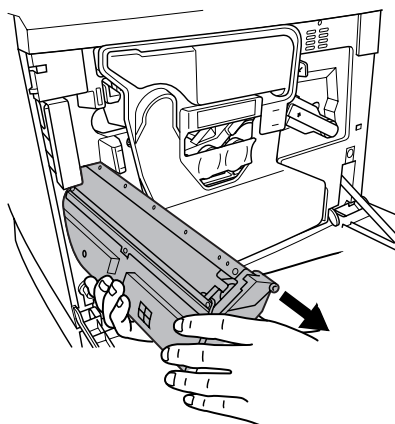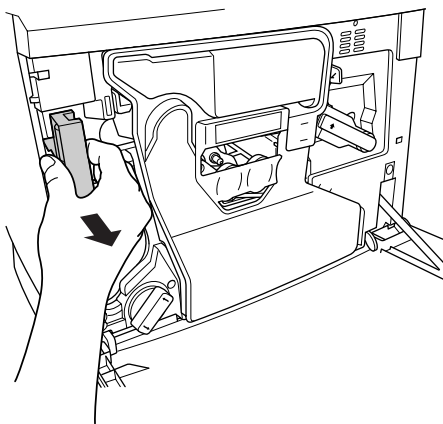

 *Dispose of it properly according to your local regulations (do not dispose of it by burning).*


- 6** Remove the new toner cartridge from its shipping carton.

- 7 Distribute the toner inside the cartridge.

*Holding a cartridge with both hands, gently shake it five or six times.*



*Each toner cartridge has a colored end that corresponds to a colored label inside the cartridge slots. Always install the toner cartridge in the slot with a label of the same color.*

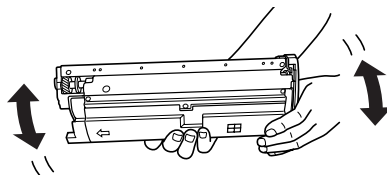


- 8 Place the front end of the toner cartridge installation guides into the cartridge installation rails on the cartridge carousel.

- 9 Gently push the new cartridge into the printer.

- 10 Close the printer's front cover.

- 11 Check the status message in the message window.

*If a toner alert message is displayed, use the Service/Clear care menu to remove it.*

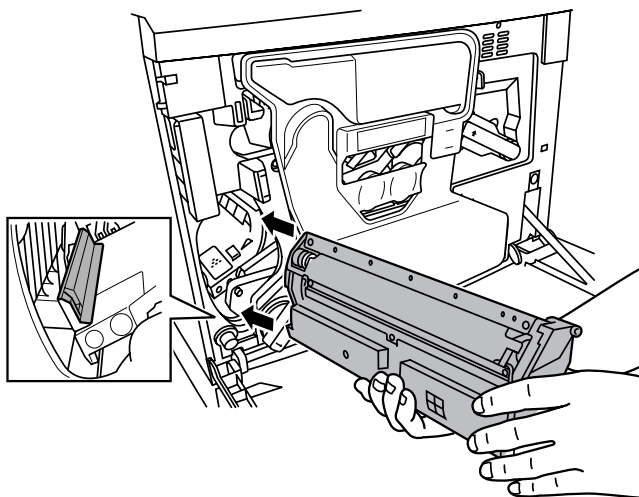

## Refilled Toner Cartridges

Use of consumables not manufactured by MINOLTA-QMS may cause damage to your printer and void your warranty. If MINOLTA-QMS printer failure or damage is found to be directly attributable to the use of non-MINOLTA-QMS consumables, MINOLTA-QMS will not repair the printer free of charge. In this case, standard time and material charges will be applied to service your printer for that particular failure or damage.

# Replacing the OPC Drum, Laser Lens Cover, and Waste Toner Pack


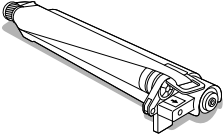
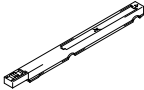
## Attention

The OPC drum is extremely sensitive to bright light and direct sunlight. Always leave it in its protective bag until you're ready to install it. Any exposure to light should be avoided, or permanent damage could result. Any damage resulting from mishandling of the OPC drum will void the warranty of the OPC drum. Also, handle the cartridge carefully by its sides so you don't touch the surface (the green part) of the drum. The drum is also extremely sensitive to hand oils and scratches, both of which reduce print quality.

When the OPC drum is worn out, the message REPLACE DRUM appears. The printer will not print until the drum kit is replaced.

*When you replace the OPC drum cartridge after a DRUM LOW or REPLACE DRUM message displays in the message window, the printer automatically recovers. However, the replaced waste toner pack consumables monitoring system must be reset.*

The three items below are included in the OPC drum kit. If one needs replacing, replace all three items.

Waste toner pack	OPC drum cartridge	Laser lens cover
		

The OPC drum life is directly related to the number of rotations of the drum. Longest drum life is achieved with continuous printing. Intermittent printing with small job sizes requires cleaning rotations before and after each job, and subsequently will impact OPC life.

The steps are:

- Removing the used waste toner pack
- Removing the used OPC drum cartridge



- Removing the laser lens cover
- Installing the laser lens cover
- Installing the new OPC drum cartridge
- Installing the new waste toner pack


## Removing the Used Waste Toner Pack




When the waste toner pack is nearly full, the message “WASTE TONER NEAR FULL” appears. Prepare to replace the entire OPC drum kit.

- 1 Turn off the printer.
- 2 Open the printer’s front cover.
- 3 Carefully remove the waste toner pack using the handle.

*Keep the waste toner pack upright so the toner does not spill.*

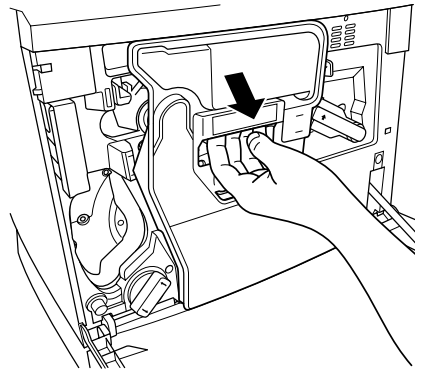


- 4 Turn the two caps labeled “A” counterclockwise and remove them.

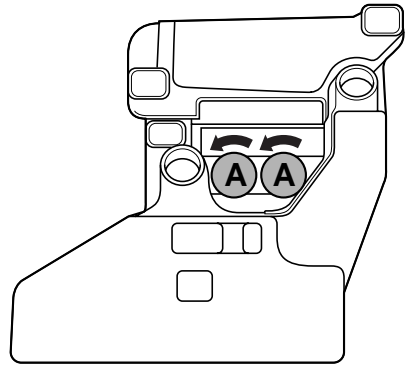


- 5 Twist the two “A” caps ① onto the two holes ② labelled “A.”

*Turn the caps clockwise to secure them.*

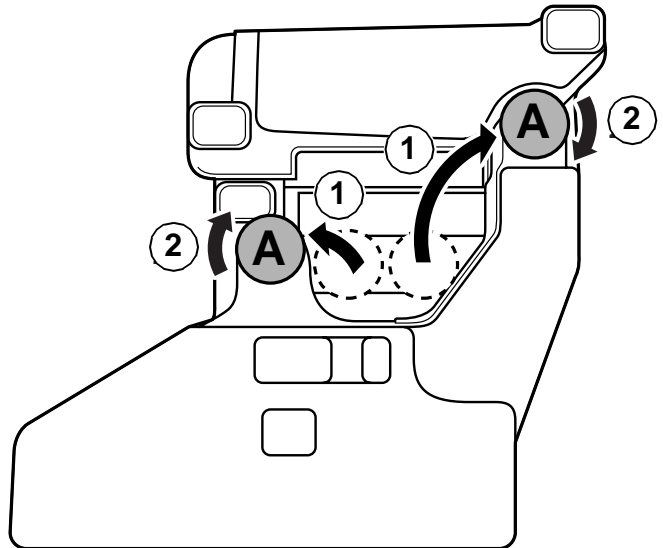


6 Remove waste toner pack cap labeled “B” and insert it into hole “B.”

7 Dispose of the used waste toner pack.

 *Dispose of it properly according to your local regulations (do not dispose of it by burning).*

8 Continue with replacing the OPC drum cartridge.

*Reinstall the new waste toner pack after replacing the OPC drum.*

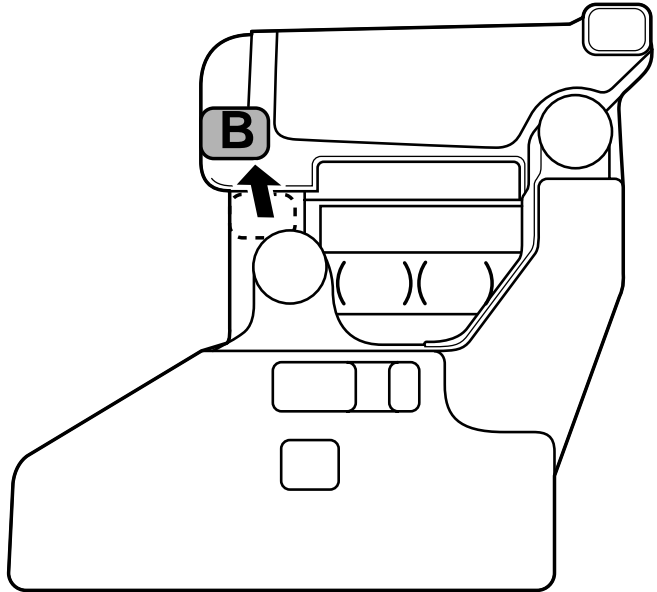


## Removing the Used OPC Drum Cartridge




- 1 With the front cover open, rotate the transfer belt unit left release lever counterclockwise to the top (12 o'clock) position.

*This raises the transfer belt unit.*

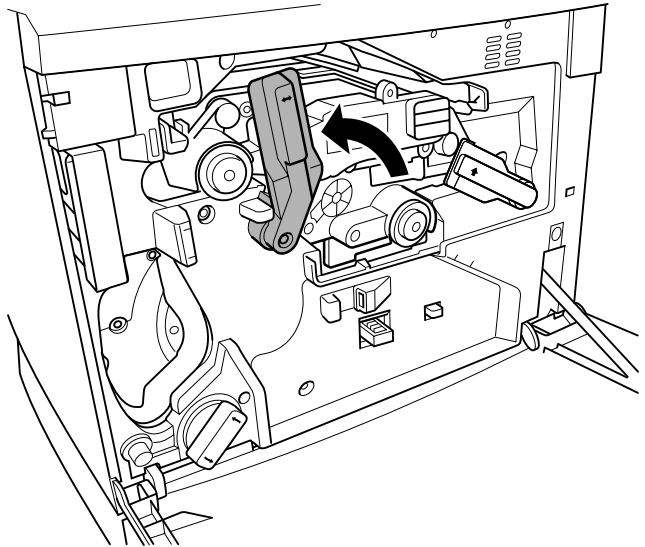


- 2 Hold the OPC drum cartridge handle with your left hand and carefully pull it out about 8 inches (20 cm).

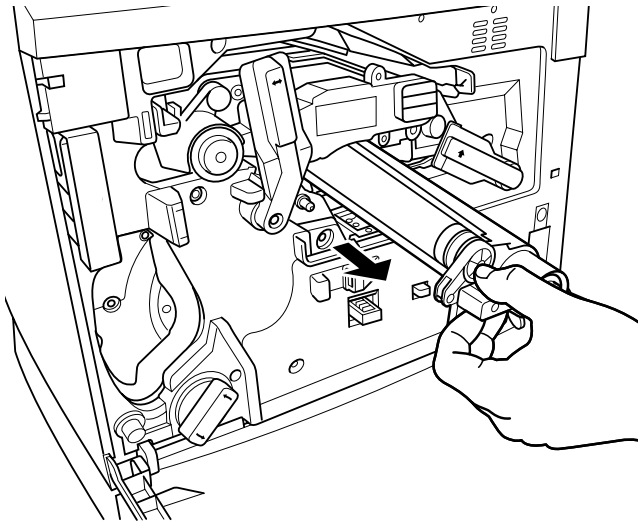

- 3 Keep your left hand in place and support the bottom of the drum with your right hand, then carefully pull the cartridge toward you and remove it.



*Dispose of it properly according to your local regulations.*

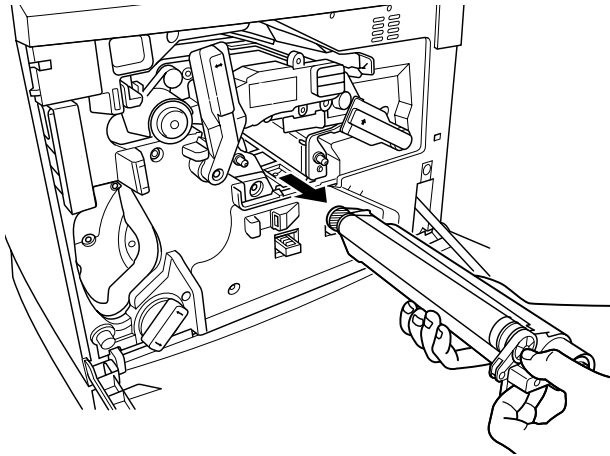

## Removing and Installing the Laser Lens Cover




- 1 Press on the laser lens cover lock release lever and gently pull the laser lens cover toward you.



*Dispose of it properly according to your local regulations.*


- 2 Remove the new laser lens cover from the OPC drum kit box.

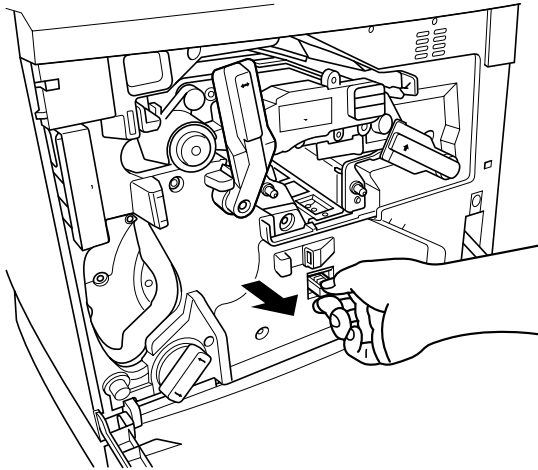

### Attention

**Do not touch the glass surface of the laser lens.**

- 3 Place the front end of the laser lens cover into its installation rail.
- 4 Carefully insert the laser lens cover and make sure it is fully inserted.

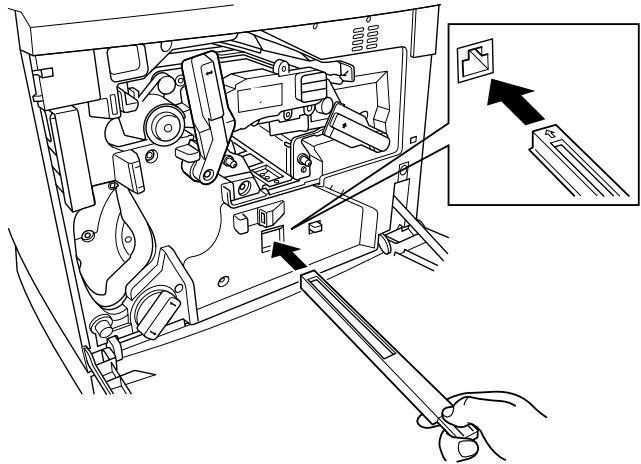


### Attention

If the laser lens cover is not properly installed, serious damage to the printer could result.

## Installing the New OPC Drum Cartridge



- 1 Remove the new OPC drum cartridge from its shipping box.

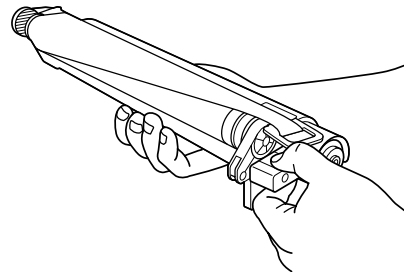


### Attention

Keep the protective sheet on the cartridge. Do not touch the protective sheet on the photosensitive (green) surface or scratch the surface. This could lower image quality.

*Make sure the transfer belt left release lever is still set to its top position (12 o'clock).*

- 2 Hold the OPC drum cartridge level, place the front end of the OPC drum cartridge installation guide into the installation rail.
- 3 Carefully push the OPC drum cartridge in.

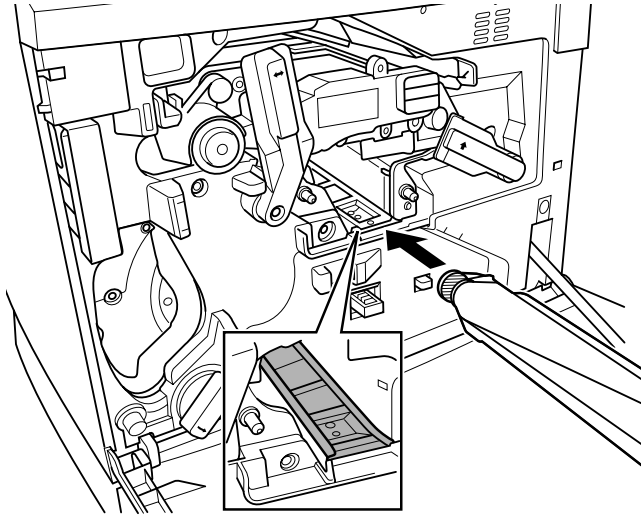


### Attention

**The cartridge should slide easily into the printer. Don't force it.**

- 4 Press on the front handle of the OPC drum cartridge with one hand and hold the front handle of the OPC protective cover with the other hand.
- 5 Peel the protective cover off (straight toward you).




*Dispose of it properly according to your local regulations.*

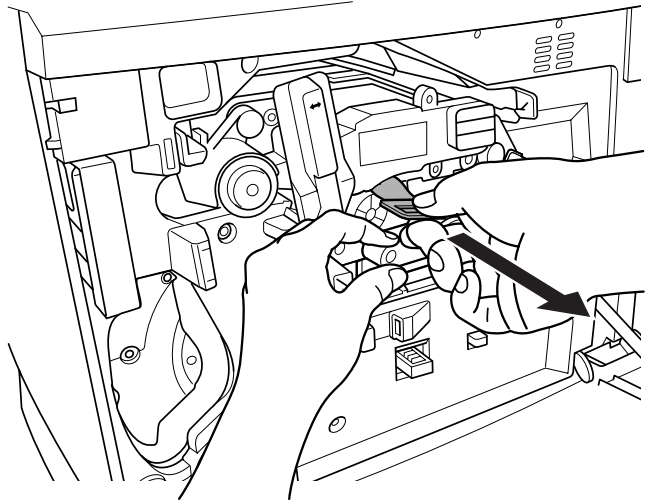

- 6 Turn the left release lever of the transfer belt clockwise to its correct position (2 o'clock).

*This lowers the transfer belt.*

*Also make sure the transfer belt right release lever is set to its correct position (10 o'clock).*

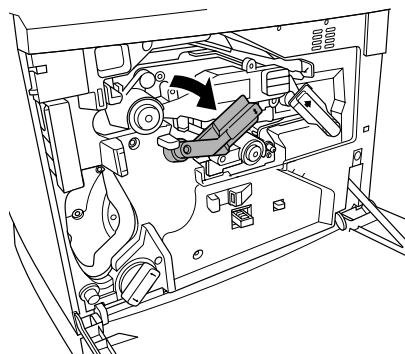

### **⚠ Attention**

**If the transfer belt left release lever is at its top position (12 o'clock), the waste toner pack cannot be installed.**

## **Installing the New Waste Toner Pack**




- 1 Remove the new waste toner pack from the drum kit box.
- 2 Insert the bottom of the waste toner pack ① into its installation position in the printer.
- 3 Insert the top of the waste toner pack ② into its installation position in the printer until it is firmly seated.
- 4 Close the printer's front cover.

*If the waste toner pack is not correctly installed or the transfer belt right release lever is at its top position (12 o'clock), the front cover cannot be closed.*

- 5 Turn on the printer.
- 6 Check the status message in the message window.

*If an OPC drum or waste toner alert message is displayed, use the Service/Clear care menu to remove it.*

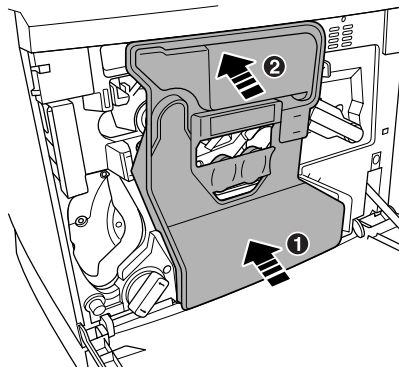



# Replacing the Fuser Unit and Transfer Roller Kit



## WARNING!

The fuser unit is hot. When the top cover is opened, the fuser unit temperature drops gradually (one hour wait time). Do not replace the fuser oil roller until you are sure that the fuser unit has cooled down.




When the fuser is worn out, the message “REPLACE FUSER UNIT” appears, and the printer does not print. Replace the fuser kit.

The fuser kit includes the two items below. When replacing the fuser unit, replace the transfer roller as well.

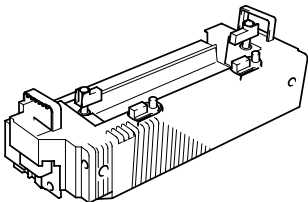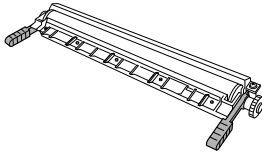Fuser unit	Transfer roller unit
	

## Replacing the Fuser Unit


- 1 Turn off the printer.
- 2 Open the printer's top cover.
- 3 Rotate the two fuser oil roller lock levers to release the fuser oil roller.

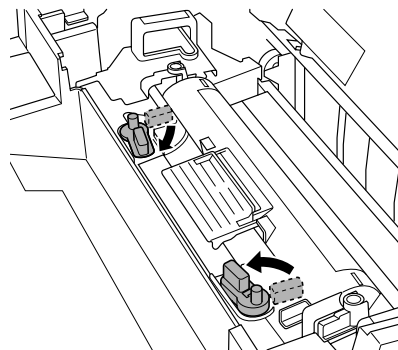

- 4 Remove the fuser oil roller.

*Hold it by the green handle only.*


- 5 Place the fuser oil roller on a level surface.

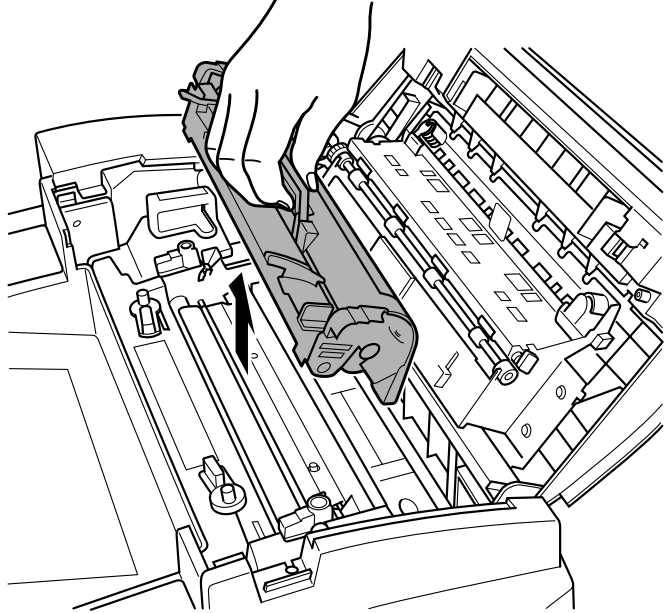


**Attention**


Since the fuser oil roller removed here is to be installed in the new fuser unit, handle it with care. If you set the fuser oil roller on the table, do it as shown in the illustration. Do not allow the roller surface to contact the table or get dirty. This could lower image quality.

- 6 Turn the release levers to release the fuser unit.

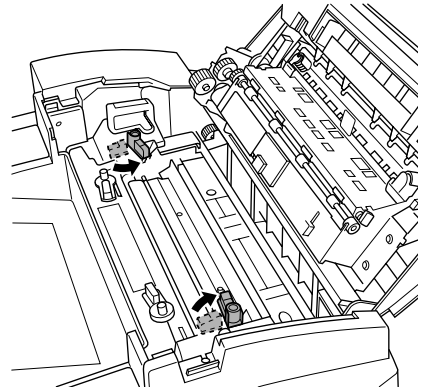


- 7 Holding the fuser unit handles, lift up the unit.



 *Dispose of it properly according to your local regulations.*

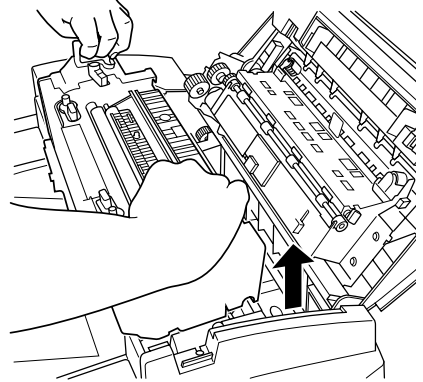

- 8 Remove the new fuser from its shipping box.

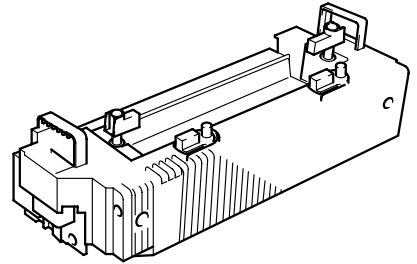


- 9 Carefully lower the new fuser unit so that the two pins in the fuser unit installation section go into the two installation holes in the fuser unit.

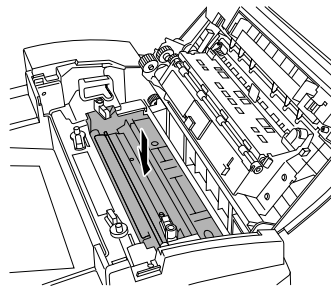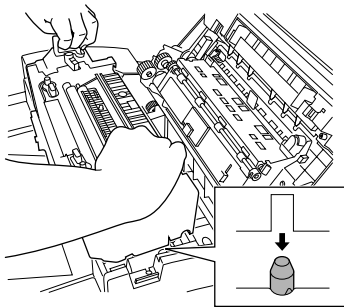

- 10 Press down on the fuser unit release levers ① and rotate them ②.


*This secures the fuser unit.*

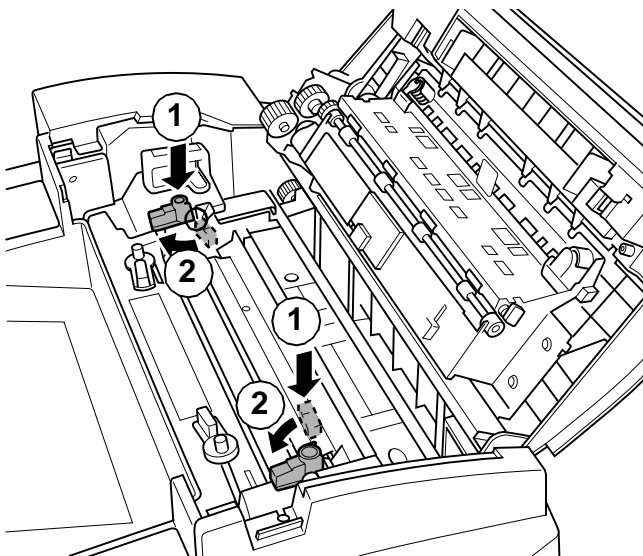


**⚠ Attention**

**If the fuser unit release levers are not set correctly, the fuser oil roller cannot be installed. Set the fuser unit release levers to the fixed position.**

- 11 Reinstall the fuser oil roller (removed in step 4).

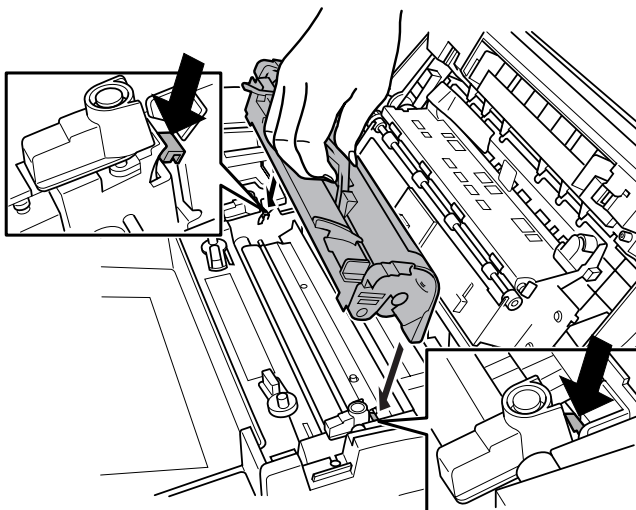

- 12 Rotate the two oil roller levers to lock the oil roller into place.

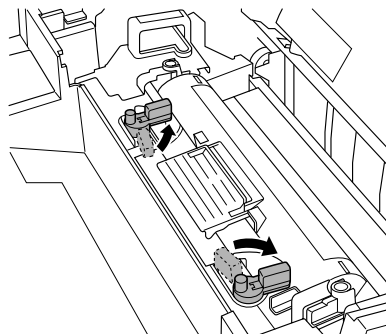

- 13 Close the printer's top cover.
- 14 Check the status message in the message window.


*If a fuser unit alert message is displayed, use the Service/Clear care menu to remove it. Check the release button to make sure the top cover is properly closed.*

## Replacing the Transfer Roller Unit



*If there is media in the multipurpose tray, remove it. Close the multipurpose tray.*

- 1 Press the right cover release button and carefully open the right cover.

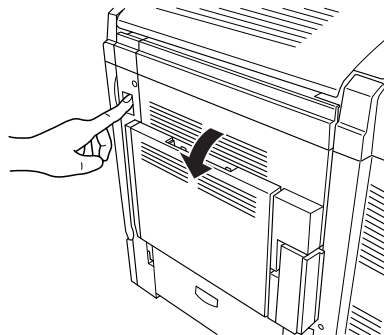


- 2 Holding the two transfer roller unit handles, remove the transfer roller unit.



*Dispose of it properly according to your local regulations.*


- 3 Remove the new transfer roller unit from the fuser kit box.

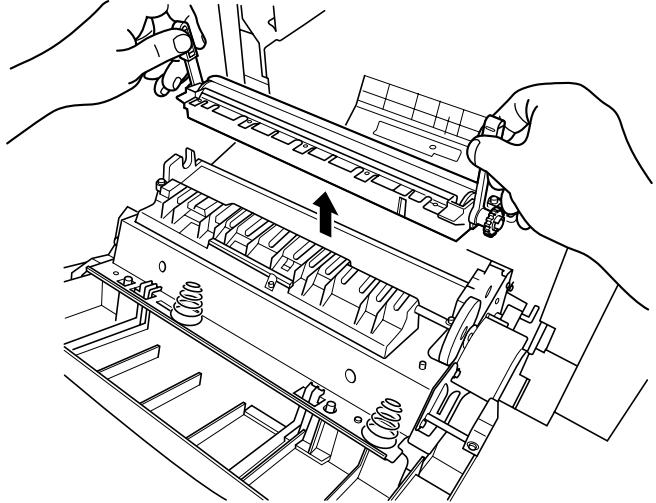


### **Attention**

**Do not touch the surface of the transfer roller unit. This could lower image quality.**

- 4 Place the new transfer roller unit on a level surface.
- 5 Lift up the two transfer roller unit handles.

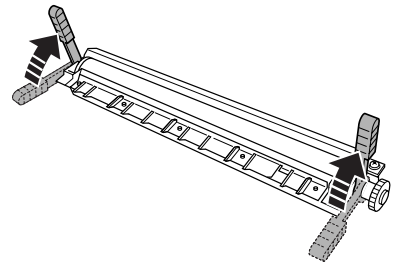

- 6 Holding the two transfer roller unit handles, carefully lower it so the transfer roller unit shaft goes into the two transfer roller unit installation guides.

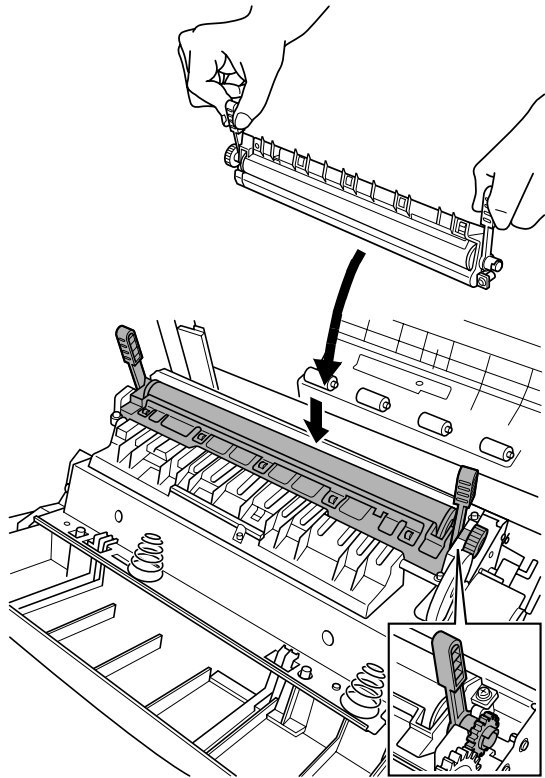


- 7 Lower the two transfer roller unit handles.

- 8 Carefully close the right cover.

*Check the release button status to make sure the cover is properly closed.*

- 9 If necessary, reopen the multipurpose tray and put the media back in.

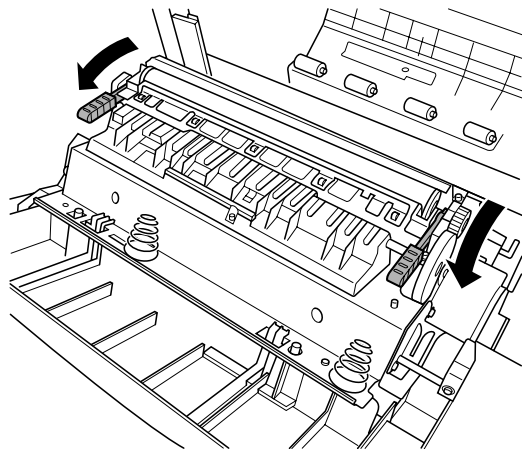

- 10 Check the status message in the message window.

*If a transfer roller alert message is displayed, use the Service/Clear care menu to remove it.*

## Replacing the Fuser Oil Roller

The fuser oil roller provides a lubricant for the printer via an oil-impregnated roller. This oil is necessary for the proper functioning of the printer.

### **WARNING!**

**The fuser unit is hot. When the top cover is opened, the fuser unit temperature drops gradually (one hour wait time). Do not replace the fuser oil roller until you are sure that the fuser unit has cooled down.**




When the fuser oil roller is worn out, the message “REPLACE OIL ROLLER” appears and the printer does not print. Replace the fuser oil roller.

- 1 Turn off the printer.
- 2 Open the printer's top cover.
- 3 Rotate the two fuser oil roller lock levers to release the fuser oil roller.




*Dispose of it properly according to your local regulations.*

- 4 Remove the new fuser oil roller from its shipping box.

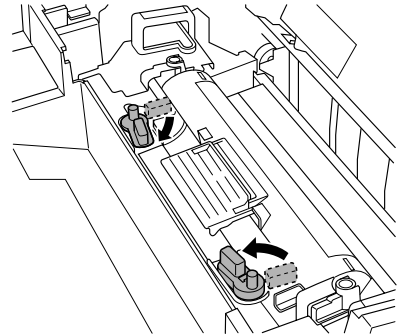

### **Attention**


**If you set the new fuser oil roller on a table, do it as shown in the illustration. Do not allow the roller surface to contact the table or get dirty. This could lower image quality.**

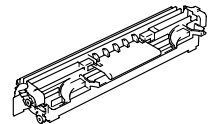




- 5 Insert the new fuser oil roller installation guides (front, rear) into the fuser unit installation rail.

- 6 Carefully lower the roller.

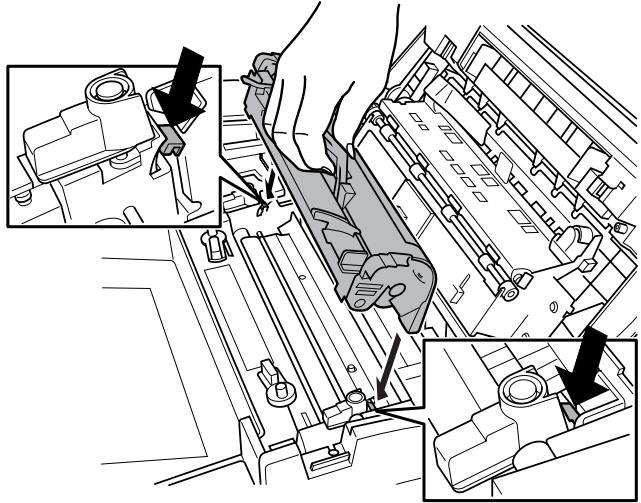

- 7 Rotate the two oil roller release levers to lock the oil roller into place.

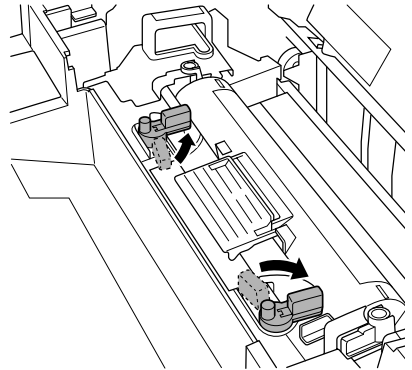

### **⚠ Attention**

**If the two fuser oil roller release levers are not correctly set, the top cover cannot be closed. Set the release levers to the roller fixed position.**

- 8 Carefully close the top cover.

*Check the release button to make sure the top cover is properly closed.*


- 9 Turn on the printer.
- 10 Check the status message in the message window.

*If a fuser oil roller alert message is displayed, use the Service/Clear care menu to remove it.*


## Replacing the Transfer Belt

When the transfer belt is at its end of life, the message “REPLACE TRANSFER BELT” appears, and the printer does not print. Replace the transfer belt. After the new transfer belt is installed, printing automatically resumes.

- 1 Open the printer's front cover.
- 2 Remove the waste toner pack.
- 3 Rotate the left transfer belt lock lever as shown in the illustration.

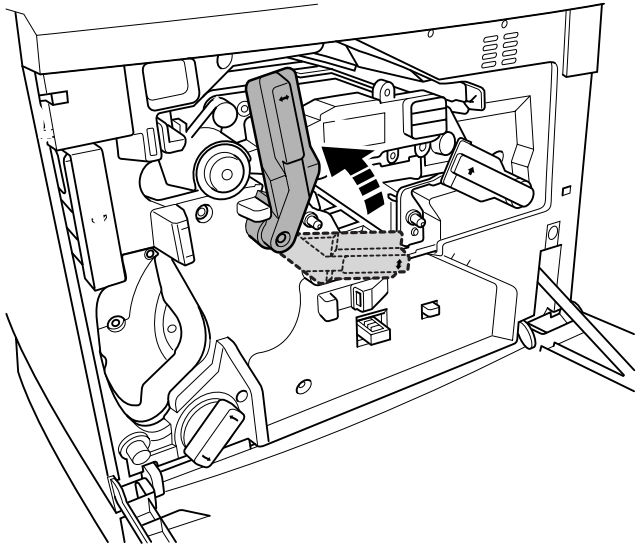

- 4 Remove the OPC drum cartridge and set it aside.

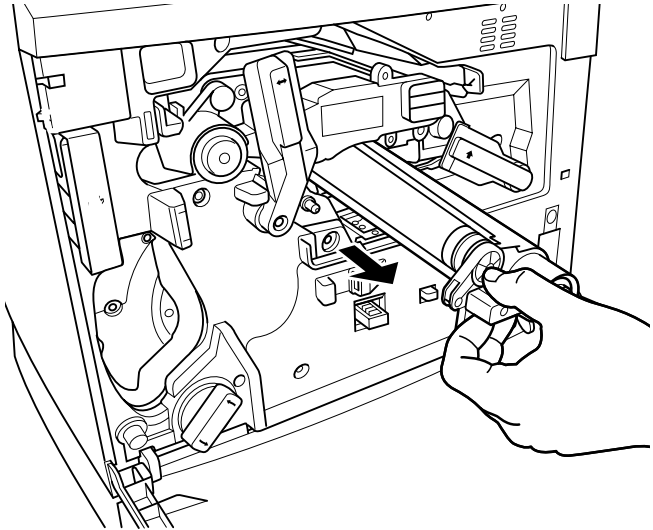

---


**Attention**

The OPC drum is extremely sensitive to bright light and direct sunlight. Always put it in its protective bag until you're ready to reinstall it. Any exposure to light should be avoided, or permanent damage could result.


Also, handle the cartridge carefully by its sides so you don't touch the surface (the green part) of the drum. The drum is also extremely sensitive to hand oils and scratches, both of which reduce print quality.


---

- 5 Rotate the left lever to its 4 o'clock position.

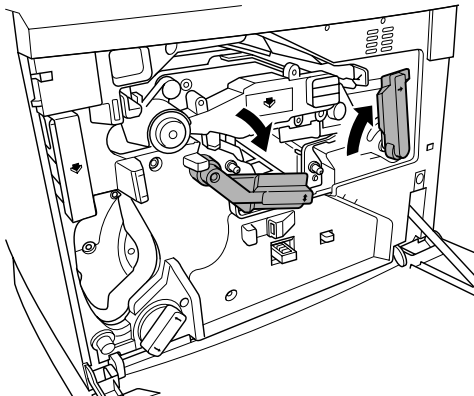


- 6 Grasp the handles of the transfer belt and remove it.

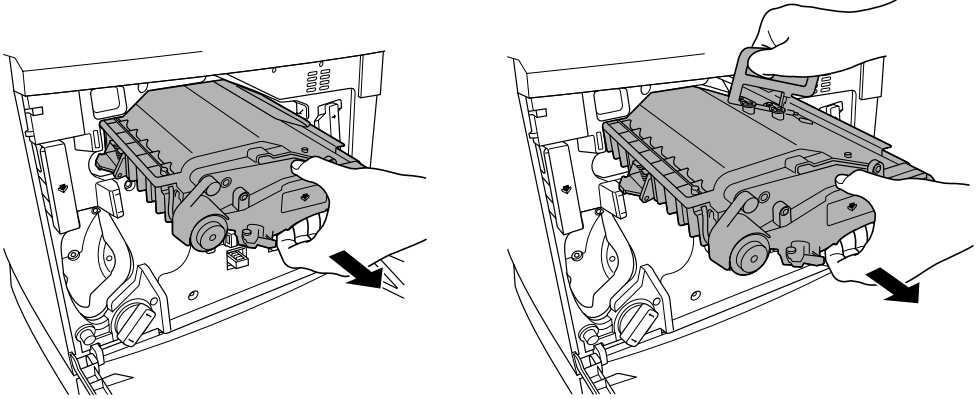

 *Dispose of it properly according to your local regulations.*


- 7 Remove the new transfer belt from its packaging and insert it into the printer.

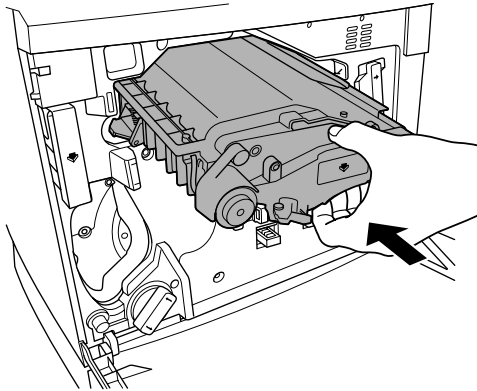


- 8 Press on the transfer belt front handle with one hand, take the handle of the transfer belt fixture with your other hand, and pull the fixture straight toward you.




*Dispose of it properly according to your local regulations.*

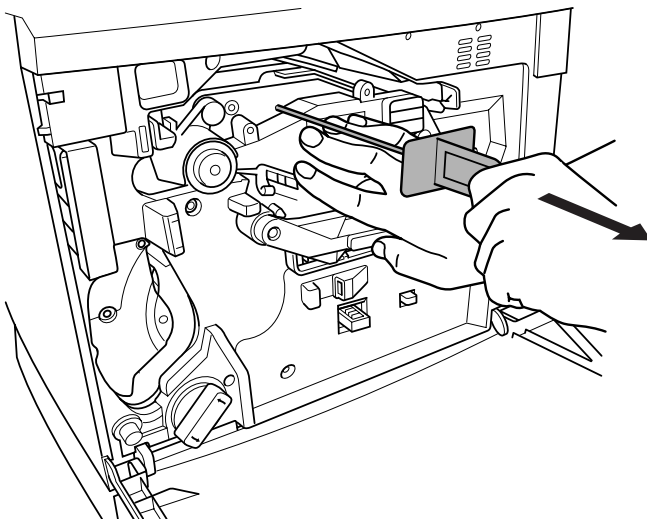


- 9 Rotate the transfer belt lock levers.

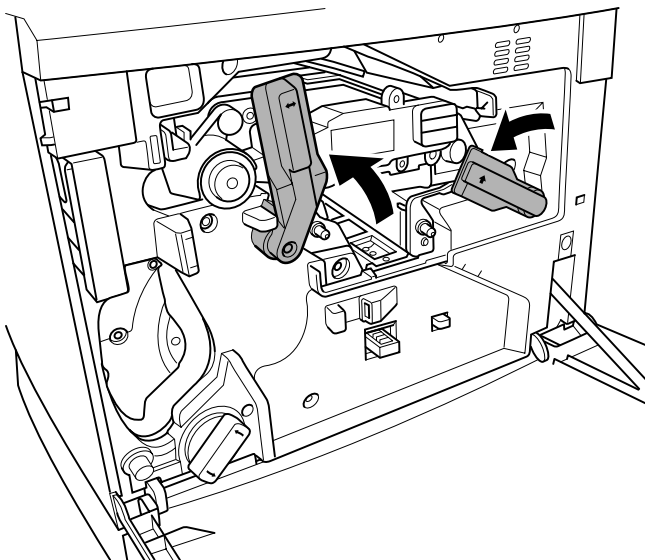

- 10** Reinstall the OPC drum cartridge.

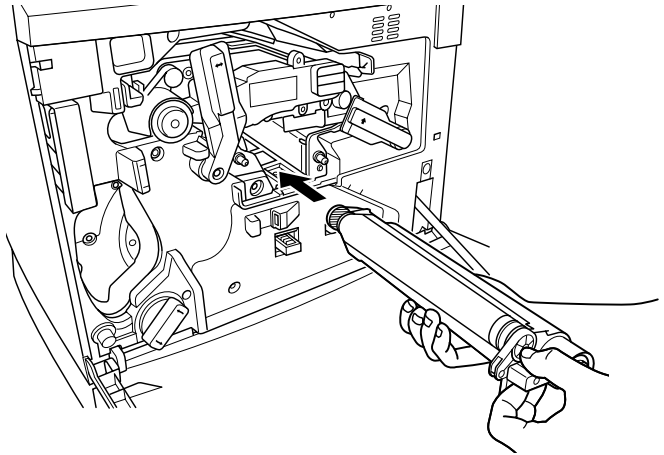

- 11** Close the transfer belt lock lever.
- 12** Make sure the laser lens cover is firmly seated.

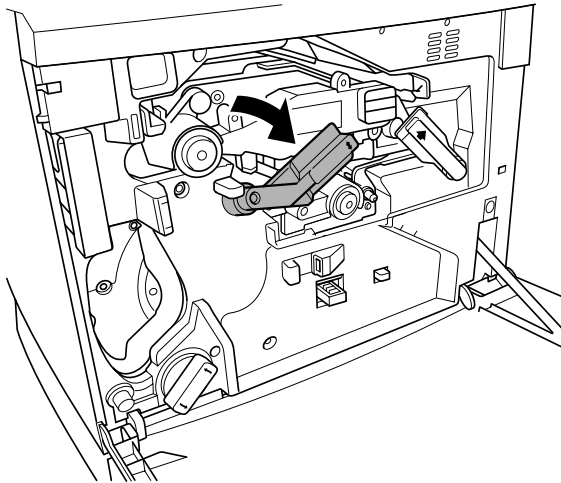


**13** Reinstall the waste toner pack.

**14** Close the front cover and turn on the printer.

**15** Check the status message in the message window.

*If a transfer belt alert message is displayed, use the Service/Clear care menu to remove it.*

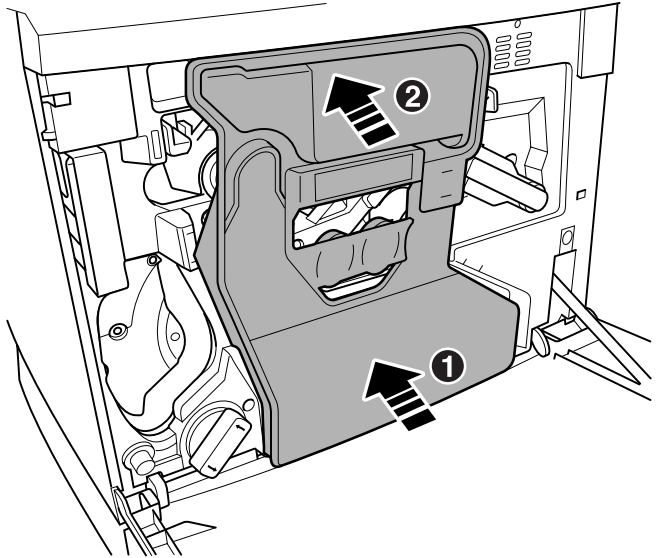





---

*Using Media*

---

**2**

# Introduction

This chapter provides information on handling, selecting, and storing media. Refer to the *Maintenance Guide* for media specifications.

## Media Handling

Before purchasing a large quantity or special media, do a trial printing with the same media and check print quality. Check with our web site [www.minolta-qms.com](http://www.minolta-qms.com) for a list of current approved media.



### Attention

**Do not use the media types listed below. These could cause poor print quality, media jams, or damage to the printer.**

#### Do not use media that is

Not approved  
Meant for ink jet printers  
Folded, embossed, warped, or wrinkled  
Perforated or prepunched  
Too slick, too coarse  
Coated with a processed surface (such as carbon paper, heat-sensitive paper, heat-pressure paper)  
Composed of foil or gilt  
Irregularly shaped (not rectangular); not uniform in size  
Bound with glue, tape, or paper clips  
Attached to ribbons, hooks, buttons, etc.  
Made of material that will melt, vaporize, offset discolor, or emit dangerous fumes

#### Do not use labels that have

Label(s) already peeled off  
Labels that peel off easily  
Glue or sealer that might come off

#### Do not use envelopes that have

Metal clasps, fasteners, transparent windows, peel-off strips for sealing  
Sticky flaps

# Media Types

## Plain Paper

<b>Formatting</b>	Format data within your application.	
<b>Input</b>	<b>Upper and Optional Trays</b>	500 sheets of 20 lb bond (75 g/m <sup>2</sup> ) paper (letter/A4/legal) each; capacity for other weights varies accordingly.
	<b>Multipurpose Tray</b>	150 sheets of 20 lb bond (75 g/m <sup>2</sup> ) paper; capacity for other weights varies accordingly.
<b>Orientation</b>	<b>Upper and Optional Trays</b>	Simplex—Face up; Duplex—Face down
	<b>Multipurpose Tray</b>	Simplex—Face down; Duplex—Face up
<b>Type</b>	Any standard or recycled office paper suitable for plain-paper laser printers, such as <ul style="list-style-type: none"><li>■ Hammermill Laser Print</li><li>■ Georgia-Pacific Microprint Laser 1000</li><li>■ Neusiedler Color Copy 90</li><li>■ Xerox 4024</li></ul>	
<b>Weight</b>	16–24 lb bond (60–90 g/m <sup>2</sup> )	
<b>Duplexing</b>	Up to 28 lb bond (105 g/m <sup>2</sup> )	

## Letterhead and Memo Media

<b>Formatting</b>	Format letterhead or memo data within your application. Try printing your data on a plain sheet of paper first to check placement.	
<b>Input</b>	<b>Upper and Optional Trays</b>	Up to 500 sheets
	<b>Multipurpose Tray</b>	Up to 150 sheets
<b>Orientation</b>	<b>Upper and Optional Trays</b>	Face up—top of page toward the right
	<b>Multipurpose Tray</b>	Face down—top of page toward the printer side

<b>Type</b>	Any standard or recycled office paper suitable for plain-paper laser printers, such as <ul style="list-style-type: none"> <li>■ Hammermill Laser Print</li> <li>■ Georgia-Pacific Microprint Laser 1000</li> <li>■ Neusiedler Color Copy 90</li> <li>■ Xerox 4024</li> </ul>	
<b>Weight</b>	16–24 lb bond (60–90 g/m <sup>2</sup> )	
<b>Duplexing</b>	<b>Upper and Optional Trays</b>	Face down—top of page toward the right
	<b>Multipurpose Tray</b>	Face up—top of page toward the printer side
<b>Notes</b>	Check your application documentation for other information about printing on letterhead and memo media.	

## Thick Stock

<b>Formatting</b>	Format the information to be printed on the thick stock within your application. Try printing your data on a plain sheet of paper first to check placement.	
<b>Input</b>	<b>Multipurpose Tray Only</b>	Up to 50 sheets, depending on the thickness of the media
<b>Orientation</b>	Face down	
<b>Type</b>	For information about thick stock media recommended for your printer, go to <a href="http://www.minolta-qms.com/support">www.minolta-qms.com/support</a> , then click on Answer Base, or contact Technical Support. See the <i>Service &amp; Support Guide</i> for a complete listing of support telephone numbers.	
<b>Weight</b>	Simplex: 24–43 lb bond (90–163 g/m <sup>2</sup> )	
	Autoduplex: Up to 28 lb bond (105 g/m <sup>2</sup> )	
	Manual Duplex: 24 lb (90 g/m <sup>2</sup> ) to 43 lb (163 g/m <sup>2</sup> ) bond	
<b>Duplexing</b>	Autoduplexing thick stock over 28 lbs (105 g/m <sup>2</sup> ) is not supported. Thicker stock may be manually duplexed.	
<b>Notes</b>	You should test the number of sheets of thick stock the multipurpose tray can hold to ensure that its performance is acceptable.  43 lb (163 g/m <sup>2</sup> ) bond is also referred to as 90 lb index stock.	

## Envelopes

<b>Formatting</b>	<p>Your printer receives the instructions to print on envelopes from your application.</p> <ul style="list-style-type: none"> <li>■ Print on the front side only. Some parts of the envelope consist of three layers of paper—the front, back, and flap. Anything printed in these layered regions may be lost or faded.</li> <li>■ See your application documentation for specific information on printing envelopes.</li> </ul>	
<b>Input</b>	<b>Multipurpose Tray Only</b>	Up to 50, depending on the thickness of the envelopes
<b>Orientation</b>	Face down	
<b>Type</b>	<p>Use common office envelopes approved for laser printing with diagonal joints, sharp folds and edges, and ordinary gummed flaps, such as</p> <ul style="list-style-type: none"> <li>■ Commercial #10: Columbian Recycled COR02</li> <li>■ International DL: Auto Fil #01914</li> </ul>	
<b>Duplexing</b>	Not supported	
<b>Notes</b>	<ul style="list-style-type: none"> <li>■ You can print <i>only</i> on the address side of the envelope.</li> <li>■ Envelopes should be dry.</li> <li>■ Do not preload or preseat envelopes.</li> </ul>	

## Labels

<b>Formatting</b>	Format label data within your application. Try printing your data on a plain sheet of paper first to check placement.	
<b>Input</b>	<b>Multipurpose Tray Only</b>	Up to 50 sheets, depending on the thickness of the labels
<b>Orientation</b>	Face down	
<b>Type</b>	<p>Use only labels recommended for laser printers, such as</p> <ul style="list-style-type: none"> <li>■ Avery 5260</li> </ul>	
<b>Weight</b>	16–90 lb (60–163 g/m <sup>2</sup> )	
<b>Duplexing</b>	Not supported	

<b>Notes</b>	<ul style="list-style-type: none"> <li>■ Avoid using labels with exposed adhesive; it may stick to the transfer belt or the fuser roller, causing labels to peel off and media jams to occur.</li> <li>■ Adhesive label stock is supported only in letter or A4 sheets.</li> <li>■ A label consists of a face sheet (the printing surface), adhesive, and a carrier sheet <ul style="list-style-type: none"> <li>— The face sheet must follow the plain paper specification.</li> <li>— The face sheet surface must cover the entire carrier sheet, and no adhesive should come through on the surface.</li> </ul> </li> <li>■ You can print continuously with label paper. However, this could affect the media feed, depending on the media quality and printing environment. If problems occur, stop the continuous print and print one sheet at a time.</li> <li>■ Check your application documentation for other information on printing labels.</li> </ul>
--------------	--

## Postcards

<b>Formatting</b>	Format postcard data within your application. Try printing your data on a plain sheet of paper first to check placement.	
<b>Input</b>	<b>Multipurpose Tray Only</b>	Up to 50 sheets, depending on the thickness of the postcards
<b>Orientation</b>	Face down	
<b>Type</b>	Use only postcards recommended for laser printers	
<b>Weight</b>	16–90 lb (60–163 g/m <sup>2</sup> )	
<b>Duplexing</b>	Not supported	
<b>Notes</b>	If the postcard is warped, press on the warped area before putting in multipurpose tray.	




## Transparencies

<b>Formatting</b>	Format the information to be printed on the transparencies within your application. Try printing your data on a plain sheet of paper first to check placement.
-------------------	--

<b>Input</b>	<b>Location</b>	Upper and Optional Trays Multipurpose tray
	<b>Capacity</b>	Up to 50 sheets, depending on the thickness of the transparencies  <i>If you have problems feeding 50 sheets, try loading only 5–10 sheets at a time. Loading a large number of transparencies at a time may cause static buildup, thus causing feeding problems.</i>
<b>Orientation</b>	<b>Upper and Optional Trays</b>	Face up
	<b>Multipurpose Tray</b>	Face down
<b>Type</b>	<p>Use any full-color transparencies (also known as OHP film) that meet normal photocopier standards. We recommend</p> <ul style="list-style-type: none"> <li>■ Q-Media Transparency Media for the magicolor 2200 for color printing</li> <li>■ 3M PP2500 for monochrome printing</li> </ul>	
<b>Duplexing</b>	Not supported	
<b>Notes</b>	<ul style="list-style-type: none"> <li>■ If you touch the face of transparencies with your bare hands, print quality may be affected.</li> <li>■ Do not handle transparency media too much. Do not fan transparency media before loading it. Resulting static electricity may cause printing errors.</li> <li>■ Keep the media path clean. Transparencies are especially sensitive to a dirty media path. If there are shadows on either the top or the bottom of the sheets, see “Printer Care” on page 80.</li> <li>■ You can print continuously with transparencies. However, this could affect the media feed, depending on the media quality and printing environment. If problems occur, stop the continuous print and print one sheet at a time.</li> <li>■ Check your application documentation for other information about printing on transparencies.</li> </ul>	

## Loading Media

Take off the top and bottom sheets of a ream of paper. Holding a stack of approximately 250 sheets at a time, fan the stack to prevent static buildup for the paper before inserting it in a tray.

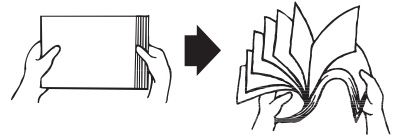

### Attention

---

**Always load the media short edge first.**

---



### Attention

---

**Do not mix media of different sizes, types, or weights, as this will cause printer jamming.**

---

- When refilling media, first remove any media remaining in the tray. Stack it with the new media, even the edges, then reload it. Although the magicolor 2200 DeskLaser was designed for printing on a wide range of media types, it is not intended to print exclusively on a single media type except plain paper. Continuous printing on media other than plain paper (such as envelopes, labels, thick stock, or transparencies) may adversely affect print quality or reduce engine life.
- For media other than standard plain paper or transparencies, both the driver (Paper tab, Paper Type option) and the MP Size key on the control panel need to be selected.

*It is important to use the MP Size key to set the multipurpose tray to the appropriate media size in order to obtain optimum printing results.*

## Autoduplexing

Duplex (2-sided) printing can be done automatically with the optional duplex unit installed.



*Only up to 28 lb bond (105 g/m<sup>2</sup>) plain paper can be duplexed.*





If you are printing duplex from the upper or optional tray, load the media printing-side down with the top of the media (or letterhead or memo information) toward the right side of the tray. If you are printing duplex from the multipurpose tray, load the media printing-side up with the top of the media toward the printer. Set the driver, for example:

- 1 In the printer driver, make sure you have selected Duplexer and clicked on the Add button.
- 2 In the printer driver, select Simplex (one-sided pages), or Long Edge (flipped horizontally as in a loose-leaf notebook), or Short Edge (flipped vertically as on a clipboard) as the Duplex option.
- 3 Click OK.


## Upper and Optional Media Trays

- 1 Slide the media tray open.
- 2 Push the media pressure plate down to lock it in position.

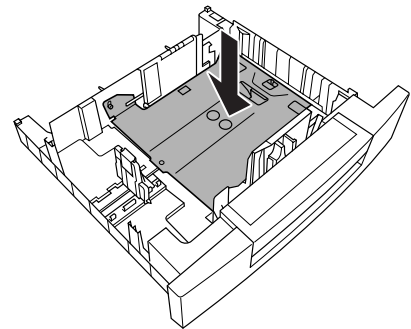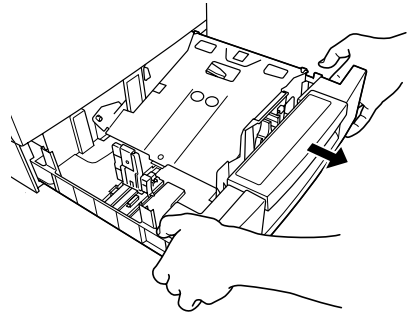

### 3 Adjust the media guides to fit the size paper you're loading.


*Squeeze the retainers, move the guides to the appropriate location (media sizes are listed on the tray), and release the retainers. The media should fit easily between the guides.*

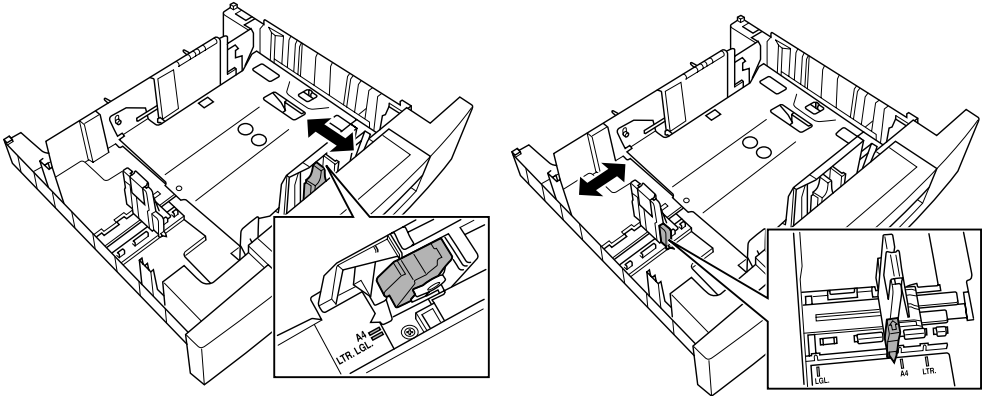


### 4 Load the paper face-up, short edge toward the right of the tray.

*Often, an arrow on the media package label indicates the printing-side of the media.*


*Do not overfill the tray.*

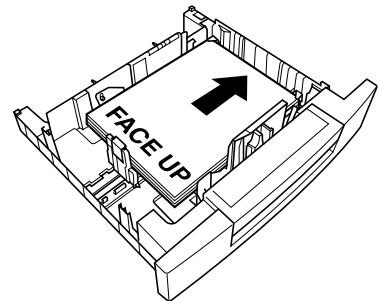

*A fill limit mark is provided on the inside of the tray. The media tray holds 500 sheets of 20 lb bond (75 g/m<sup>2</sup>) paper.*

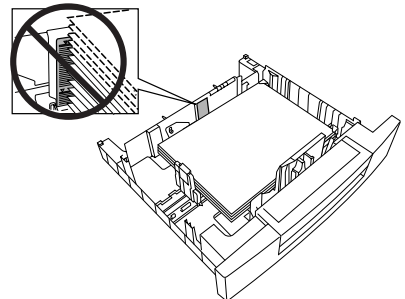


*Make sure that the paper fits easily between the guides and the paper corners are under the left and right media-separating tabs and are not bent.*

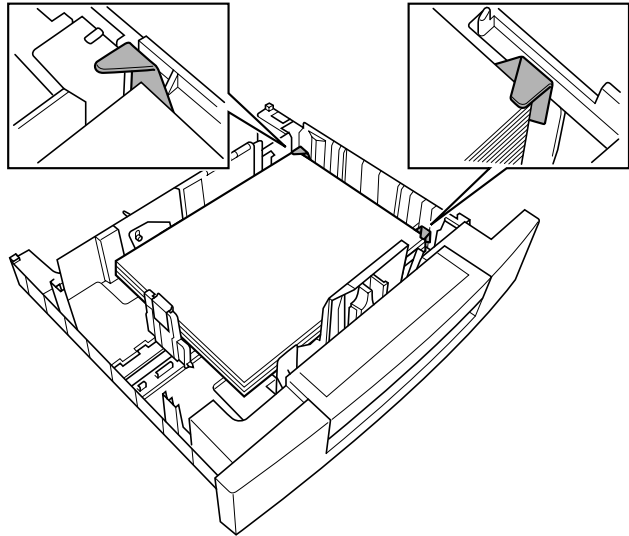


### **⚠ Attention**

**Always readjust the media guides after inserting the media. Improperly adjusted guides may cause poor print quality, media jams, or printer damage.**

- 5** Slide the tray back into the printer.

 *If you have removed the tray from the printer, slightly tilt up the tray to insert it into the installation rails to slide it back in.*

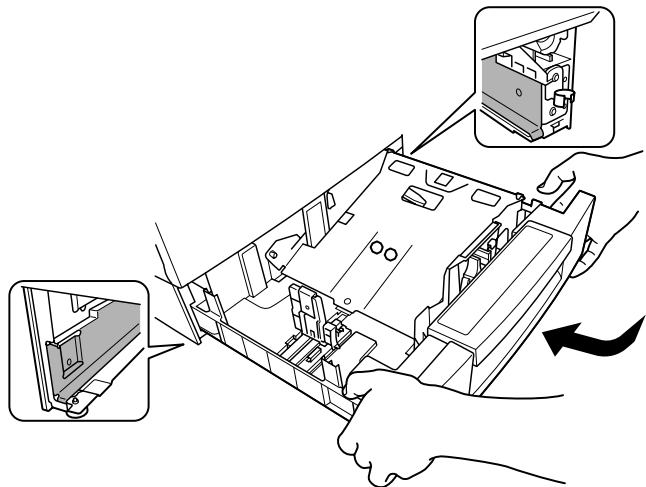


## Multipurpose Tray


Page sizes other than letter, A4, and legal can be printed only from the multipurpose tray (also known as tray 1). Use the printer driver to set the page size.

Other special types of media (such as thick stock, transparencies, and envelopes) are also fed from the multipurpose tray. See “Media Specifications” in the *Maintenance Guide* for more information about media.

- 1 Open the multipurpose tray on the right side of the printer.

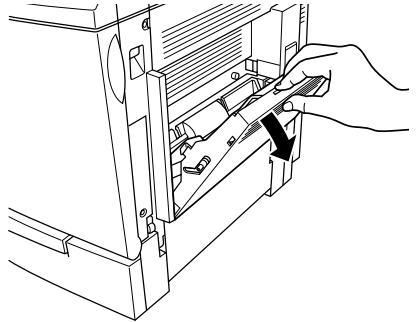

- 2 Open the media support.

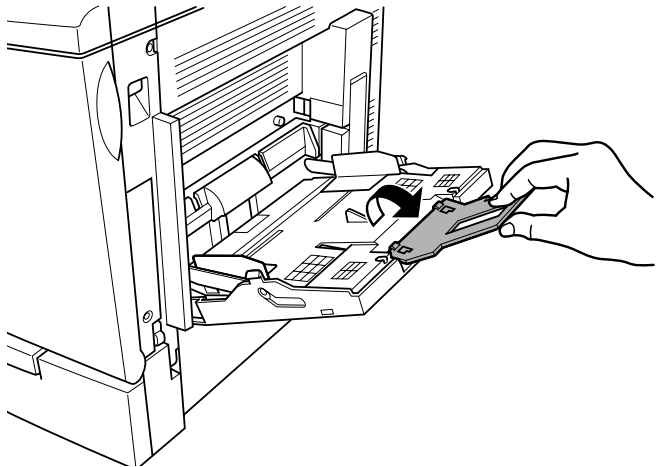



### Attention

**Load only one type/size of media per tray at a time.**


- 3 Load the media face down, short edge toward the printer.

*Often, an arrow on the paper package label indicates the face-up (printing) side of the paper.*

*A fill limit mark is provided on the inside of the media guides on the multipurpose tray. The multipurpose tray holds 150 sheets of 20 lb bond (75 g/m<sup>2</sup>) paper.*

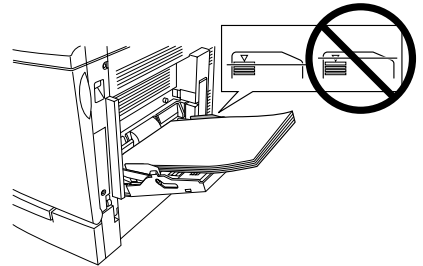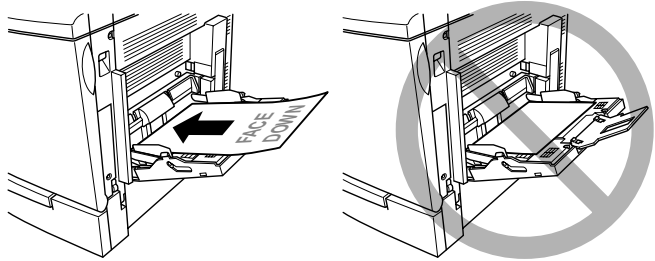

- 4 Adjust the media guides to fit the size media you're loading.

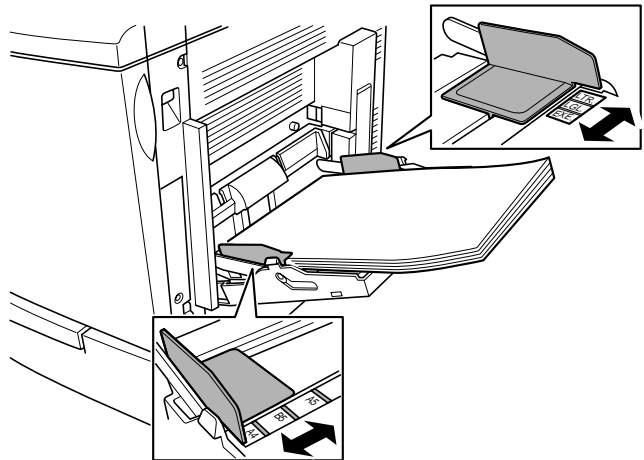

### **⚠ Attention**



**Always adjust the media guides after inserting the media. A guide that is not properly adjusted can cause poor print quality, media jams, or printer damage.**

- 5 Specify the media size in the multipurpose tray by using the printer driver.

## Printing Envelopes from the Multipurpose Tray

- 1 Flex the envelope stack (including the edges) to remove any stiffness.
- 2 Place the envelopes on a flat surface, and flatten them by pressing down the corners.
- 3 Correct any bent corners, and then tap the envelopes on a flat surface to align them.
- 4 Place the envelope stack into the multipurpose tray with the flap-side up.

*Check your application documentation to determine if the flap should be placed on the left or on the right. Print a single envelope to check the orientation before printing multiple copies.*

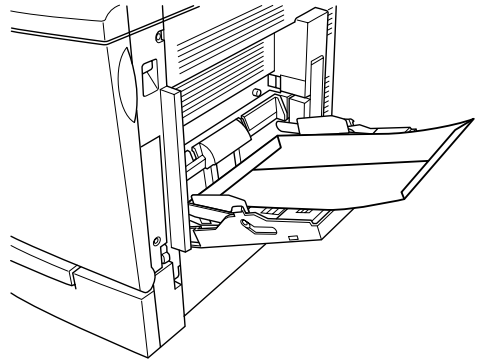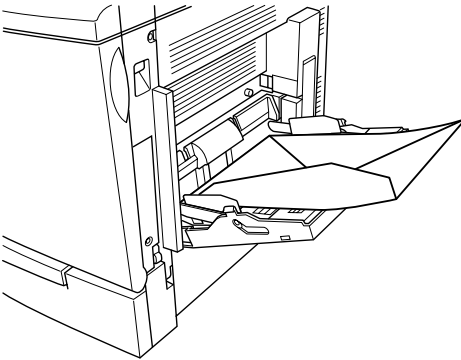

- 5 Adjust the media guides to the width of the envelopes.

*Make sure the guides are snug enough to keep the envelopes straight, but not so tight that they buckle the envelopes.*


- 6 Open the flap of each envelope immediately (before it cools) after the envelope is delivered to the output tray.



*Because the envelopes pass through heated rollers, the gummed area on the flaps may seal. Using envelopes with emulsion-based glue avoids this problem.*

## Printing Area

The printing area on all media sizes is up to about 0.157 inch (4 mm) from the edges of the media.

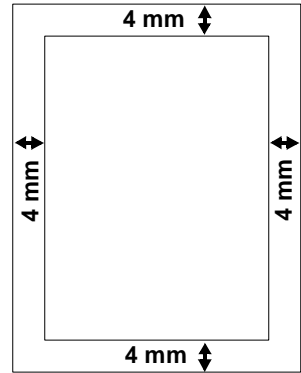

## Media Storage

When storing media, avoid:

- Direct sunlight
- Excess heat and humidity
- Dust

If media has been removed from its wrapper, place it in its original packaging and store in a cool, dark place on a level surface.







---

# *Printer Driver Configuration*

---

# 3

# Introduction

The magicolor 2200 DeskLaser printer driver is for use with Windows Me/2000/NT4/98/95 operating systems. This chapter describes how to configure the printer driver and the MINOLTA-QMS Crown Print Monitor. We've also included information about using the MINOLTA-QMS Printer Status Monitor.

## Configuring the Printer Driver

This section explains how to access and configure the magicolor 2200 DeskLaser printer driver.

The printer configuration options are located on tabs that appear in the magicolor 2200 DeskLaser printer driver window. To access options for viewing or modification, open the printer driver window and click on the tab appropriate for your needs. Online help is also available while you're configuring the printer driver. Just choose any Help button.

### Windows Me/98/95 Configuration Methods



*If you're using Windows 2000/NT 4, refer to "Windows 2000/NT 4 Configuration Methods" on page 52 for complete information.*

There are two methods of accessing the configuration options of the printer driver:

... via the printer device properties	... via your application's printer setup
Gives you access to all printer settings	Gives you access to Paper, Page Layout, Image, Device Option, and About tabs.
Lets you assign the default printer settings for all print jobs	Lets you assigns the printer settings for only the current print job
Retains your settings until changed again via properties	Temporarily overrides the existing default settings
<b>How To:</b> <ol style="list-style-type: none"><li>1 From the Windows Start menu choose Settings.</li><li>2 Choose Printers.</li><li>3 Select the magicolor 2200 DeskLaser printer driver.</li><li>4 From the File menu, choose Properties.</li><li>5 Make your selections, and then choose OK to save your changes.</li><li>6 Close the Printers window.</li></ol>	<b>How To:</b> <ol style="list-style-type: none"><li>1 From the application's File menu choose Print (or, in some cases, Print Setup or Page Setup).</li><li>2 In the Print, Print Setup, or Page Setup dialog box, select the magicolor 2200 DeskLaser printer driver.</li><li>3 Choose the Properties button.</li><li>4 Make your selections, and then choose OK to save your changes.</li><li>5 Choose OK from the Print Setup window.</li></ol>



*You should configure your printer driver settings via the printer driver properties method for your typical print jobs and use your application's printer setup method for print jobs that require special, less frequently needed printer settings.*

The tabs and a summary of the options found on each are as follows:

- **General**—Allows you attach comments, use a separator page, and print a test page. See your Windows documentation.
- **Details**—Allows you to set interface connection details. See your Windows documentation.
- **Sharing**—Allows you to set up the printer so others on the network can use it. See your Windows documentation.

- **Color Management (Windows 98 only)**—Allows you to select the color profile associated with your printer or allow the operating system to make the selection for you.
- **32-bit SuperDriver Setup**—This tab leads to the following set of tabs that are also available from your application’s printer setup properties. See “32-bit SuperDriver Setup” on page 55.
  - **Paper**—Allows you to provide information about the document type and location of the media you want to print on. See “Configuring Paper Options” on page 56.
  - **Page Layout**—Allows you to specify N-up (Number-up) settings, scaling and watermarks used for your print jobs. See “Configuring Page Layout Options” on page 63.
  - **Image**—Allows you to provide settings for color format, image brightness and contrast, color balance, and color matching. See “Configuring Image Options” on page 70.
  - **Device Options**—Allows you to specify which printer options are installed on your printer. See “Configuring Device Options” on page 74.
  - **About**—Displays the magicolor 2200 DeskLaser printer driver release version and date. See “Information on the About Tab” on page 75.

## Windows 2000/NT 4.0 Configuration Methods



*If you’re using Windows Me/98/95, refer to “Windows Me/98/95 Configuration Methods” on page 50 for complete information.*

There are three methods you can use to configure the printer driver. However, these three methods don't all have the same options or control.

<b>... via the printer driver properties</b>	<b>... via your application's printer setup</b>
Gives you access to the General, Ports, Scheduling (Windows NT 4.0) or Advanced (Windows 2000), Sharing, Security, and About tabs	Gives you access to the Paper, Page Layout, Image, Device Options, and About tabs
Lets you assign the printer settings for all print jobs	Lets you assigns the printer settings only for the current print job
Retains your settings until changed again via properties	Temporarily overrides the existing default document settings
<b>How To:</b>  <ol style="list-style-type: none"><li>1 From the Windows Start menu choose Settings.</li><li>2 Choose Printers.</li><li>3 Select the magicolor 2200 DeskLaser printer driver.</li><li>4 From the File menu, choose Properties.</li><li>5 Make your selections, and then choose OK to save your changes.</li><li>6 Close the Printers window.</li></ol>	<b>How To:</b>  <ol style="list-style-type: none"><li>1 From the application's File menu choose Print (or, in some cases, Print Setup or Page Setup).</li><li>2 In the Print, Print Setup, or Page Setup dialog box, select the magicolor 2200 DeskLaser printer driver.</li><li>3 Choose the Properties button.</li><li>4 Make your selections, and then choose OK to save your changes.</li><li>5 Choose OK from the Print Setup window.</li></ol>

<b>... via document defaults (Windows NT 4.0) or via printing preferences (Windows 2000)</b>
Gives you access to the Paper, Page Layout, Image, Device Options, and About tabs
Lets you assign the default printer settings for all print jobs
Retains your settings until changed again via properties
<b>How To:</b>  <ol style="list-style-type: none"><li>1 From the Windows Start menu choose Settings.</li><li>2 Choose Printers.</li><li>3 Select the magicolor 2200 DeskLaser printer driver.</li><li>4 From the File menu, choose Default Document Properties (Windows NT 4.0) or choose Printing Preferences (Windows 2000).</li><li>5 Make your selections, and then choose OK to save your changes.</li><li>6 Close the Printers window.</li></ol>



*You should configure your printer driver settings via the printer device properties and document defaults properties for your typical print jobs and use your application's printer setup method for print jobs that require special, less frequently needed printer settings.*



*Because Windows NT remembers the configuration changes you make to the driver, reinstalling the driver does not restore the factory default configuration.*

Five tabs appear in the magicolor 2200 DeskLaser Properties window through the Start menu: General, Ports, Color Management, Scheduling, Sharing, and Security. The tabs and a summary of the options found on each are as follows:

- **General**—Allows you to name the printer, specify a location, specify a driver to be used, install a new or updated printer driver, use a separator page between documents, specify a specialized print processor/data type, and print a test page. See your Windows documentation.
- **Ports**—Lists the available ports (under Ports), the associated port monitor (under Description), and a comma-delimited list of printers that use the port (under Printer). Allows you to add, delete, or configure ports. It also allows the printer to get setting and status information from other printing devices, and enables printer pooling (printing to two or more identical printing devices through one logical printer). See your Windows documentation.
- **Color Management**—Allows you to select the color profile associated with your printer or allow the operating system to make the selection for you. See your Windows documentation.
- **Scheduling (Windows NT 4.0) or Advanced (Windows 2000)**—Allows you to configure the printer for availability, set spooling information, and define default document printing priority. See your Windows documentation.
- **Sharing**—Allows you to share the printer and install alternate drivers. See your Windows documentation.
- **Security**—Allows you to modify the permissions to limit access on the printer, view or set auditing information, or view or take ownership of the selected item(s). See your Windows documentation.

The Paper, Page Layout, Image, Device Options, and About tabs—accessible from your application’s printer setup and from document default properties are explained in the “32-bit SuperDriver Setup,” section that follows.

 
## 32-bit SuperDriver Setup

### Printer Driver Controls for Windows Me/2000/NT4/98/95



*The printer driver application does not fully display when monitor resolution is set to 640x480 pixels. You must increase your monitor resolution to 600x800 pixels or greater for full viewing of the application window. See your operating system online help for information about changing your monitor resolution setting.*

The following pages in this section describe the function and available settings for the controls located on the Paper, Page Layout, Image, Device Options and About tabs in the magicolor 2200 DeskLaser printer driver. These tabs are common for all of the supported Windows operating systems.




## Configuring Paper Options

The Paper tab allows you to provide information about the type, size, and location of the media you want to print on. If a duplex unit is installed, there is also a setting for duplex print options.



*Optional printer components such as a duplex unit, 5-bin mailbox, and lower feeder unit must be identified in the Device Options tab before you can identify settings for these features (settings for optional components are grayed out or do not appear).*

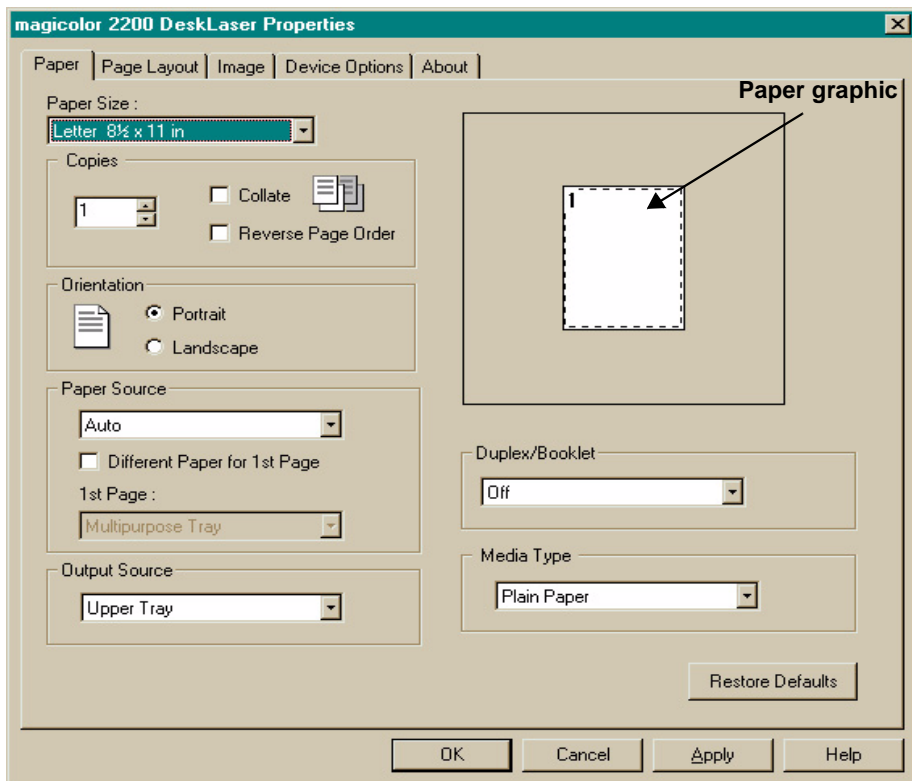



## Paper Size

<b>Purpose</b>	Sets the media size.		
<b>Choices</b>	<b>Size</b>	<b>Inches</b>	<b>Millimeters</b>
	A4	8.3 x 11.7	210.0 x 297.0
	A5	5.8 x 8.3	148.0 x 210.0
	B5 (JIS)	7.2 x 10.1	182.0 x 257.0
	B5 (ISO)	6.9 x 9.8	176.0 x 250.0
	Executive	7.3 x 10.5	185.4 x 266.7
	Folio	8.5 x 13.0	215.9 x 330.0
	Foolscap	8.0 x 13.0	203.0 x 330.0
	Legal	8.5 x 14.0	215.9 x 355.6
	Letter	8.5 x 11.0	215.9 x 279.4
	SP Folio	8.5 x 12.3	215.9 x 315.0
	Statement	5.5 x 8.5	140.0 x 215.9
	UK Quarto	8.0 x 10.0	203.0 x 254.0
	C5	6.4 x 9.0	162.0 x 229.0
	C6	4.5 x 6.4	114.0 x 162.0
	Chokei #3	4.7 x 9.3	120.0 x 235.0
	Chokei #4	3.5 x 8.1	90.0 x 205.0
	Com 10 Envelope	4.1 x 9.5	105.0 x 241.3
	Envelope DL	4.3 x 8.7	110.0 x 220.0
	GT Postcard	4.0 x 6.5	101.5 x 165.0
	Japanese Postcard	3.9 x 5.8	100.0 x 148.0
	Monarch	3.9 x 7.5	98.4 x 191.0
<b>Default</b>	Letter 8.5 x 11.0 in (215.9 x 279.4 mm)		

## Copies

<b>Purpose</b>	Sets the number of copies to be printed.
<b>Choices</b>	<b>1–999</b>
<b>Default</b>	1
<b>Additional Choices</b>	See “Collate” in this section.



## Collate

<b>Purpose</b>	Collates multiple copies of documents when selected.
<b>Choices</b>	<p><b>Enabled (selected)</b>—All pages of the document are printed before the next copy is printed.</p> <p><b>Disabled</b>—All copies of each page are printed before the next page is printed.</p>
<b>Default</b>	Disabled
<b>Notes</b>	<p>This option is available only if multiple copies is selected. See “Copies” in this section.</p> <p>If you are making multiple duplex copies of a job that has an uneven number of pages, deselect collation in the application and then select Collate in the driver on the Paper tab.</p>

## Reverse Page Order

<b>Purpose</b>	Prints pages in reverse order when selected.
<b>Choices</b>	<p><b>Enabled (selected)</b>—Prints from the last page of document to the first page.</p> <p><b>Disabled</b>—Prints from the first page of the document to the last page.</p>
<b>Default</b>	Disabled

Orientation

Purpose	Sets the orientation (printing direction) of the print media.
Choices	<div> <div> <b>Portrait</b>—Prints along the short edge of the page (vertical page orientation). </div> <div>  </div> </div> <div> <div> <b>Landscape</b>—Prints along the long edge of the page (horizontal page orientation). </div> <div>  </div> </div>
Default	Portrait

Paper Source

Purpose	Sets the input source (cassette) from which print media is pulled into the printer
Choices	<div> <div> <b>Auto</b>—The printer uses the first cassette it can find that contains media large enough to satisfy the print job requirements. </div> <div> <b>Multipurpose Tray</b>—The multipurpose tray. </div> <div> <b>Upper Tray</b>—The cassette in the standard (upper) position. </div> <div> <b>Optional Tray</b>—The cassette in the lower position (available only on printers with an optional lower feeder unit installed and the optional tray selected on the Device Options tab). </div> </div>
Default	Auto
Notes	<div>When the printer is first turned on, the upper tray is selected. After that, the printer uses the last cassette selected.</div> <div>See “Different Paper for 1st Page” in this section.</div>

## Different Paper for 1st Page

<b>Purpose</b>	Allows you to select the paper source that will be used for the first page of the document.
<b>Choices</b>	<b>Enabled (selected)</b> —The first page of the document will use the paper source identified in the 1st Page list. <b>Disabled</b> —All pages of the document use the same paper source.
<b>Default</b>	Disabled
<b>Additional Choices</b>	When enabled is selected, the 1st Page list is activated. See “1st Page” in this section.

## 1st Page

<b>Purpose</b>	This list allows you to identify the paper source for the first page of the document.
<b>Choices</b>	<b>Upper Tray</b> <b>Multipurpose Tray</b> <b>Optional Tray</b> —Available only on printers with an optional lower feeder unit installed and the optional tray selected on the Device Options tab.
<b>Default</b>	Upper Tray
<b>Notes</b>	This list is disabled (grayed-out) if Different Paper for 1st Page is disabled.

## Output Source

 
<b>Purpose</b>	Sets the output bin where printed media is to be delivered.
<b>Choices</b>	<b>Upper Tray</b> —The printer will send printed media to the upper output bin. <b>Mailbin 1-5</b> —The mailbin output bin (mailbin 1-5).
<b>Default</b>	Upper Tray
<b>Notes</b>	Output Source options are supported only on printers with a 5-bin mailbox installed and the 5-bin mailbox option selected on the Device Options tab.

## Paper Graphic

The paper graphic image changes according to Paper Size, Orientation and Duplex/Booklet selections, and will display the selected N-up setting.

# Duplex/Booklet

<b>Purpose</b>	Allows you to specify whether and how your print job will be duplexed.
<b>Choices</b>	<p><b>Off</b></p> <p><b>Long Edge</b>—Prints flipped horizontally on the long edge as in a loose-leaf notebook.</p> <p><b>Short Edge</b>—Prints flipped vertically on the short edge as on a clipboard.</p> <p><b>Booklet Left Binding</b>—Orients faces (2-up) with binding (fold) on left.</p> <p><b>Booklet Right Binding</b>—Orients faces (2-up) with binding (fold) on right.</p>
<b>Default</b>	Off
<b>Notes</b>	<p>Duplex/Booklet options are supported only on printers with a duplex unit installed and the duplexer option selected on the Device Options tab.</p> <p>Duplex/Booklet options are only available when Plain Paper is the Media Type.</p> <p>Printing with booklet binding produces four faces of print on each duplexed sheet of media (2-up on each side of the media). The faces are arranged so that when the media is folded, the page ordering is booklet style.</p> <p>To use Booklet Left Binding or Booklet Right Binding, the N-up option (on the Page Layout tab) must be Off.</p>




Media Type

Purpose	Sets the type of media to be printed.
Choices	<b>Plain Paper</b> mode—Long-grain paper 16–24 lb (60–90 g/m <sup>2</sup> ) <b>Transparency</b> mode—Transparencies 24–41.75 lb (90–157 g/m <sup>2</sup> ) <b>Label Stock</b> mode—Label stock 16–43 lb (60–163 g/m <sup>2</sup> ) <b>Thick Stock</b> mode—Thick stock 24 –43 lb (90–163 g/m <sup>2</sup> )
Default	Plain Paper
Notes	Duplex Options are available only when Plain Paper is selected as the Media Type.


Default Button

 The Default button on the Paper tab allows you to restore all of the options on the Paper tab to their default settings.



## Configuring Page Layout Options

The Page Layout tab allows you to provide information about the number of document pages to print on a single side of media, the scaling percentage to be applied and the identification and placement of watermarks to be printed.

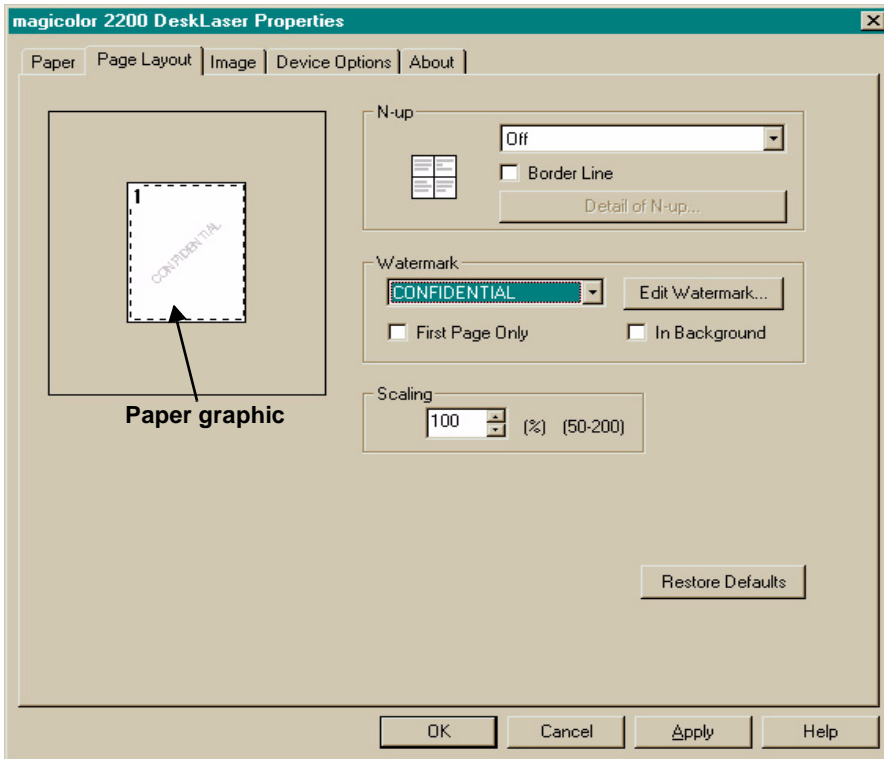


# N-up (Number-up)

<b>Purpose</b>	Selects the number of document pages to print on a single side of the media.
<b>Choices</b>	<b>Off</b> —One document page will be printed on each media page. <b>2-, 4-, 6-, 9-, 16-Up</b> —Multiple document pages will be printed on each media page.
<b>Default</b>	Off
<b>Notes</b>	The N-up option setting is disabled (grayed-out) if the Scaling option is in effect. To enable the N-up option, set the Scaling option setting to 100.



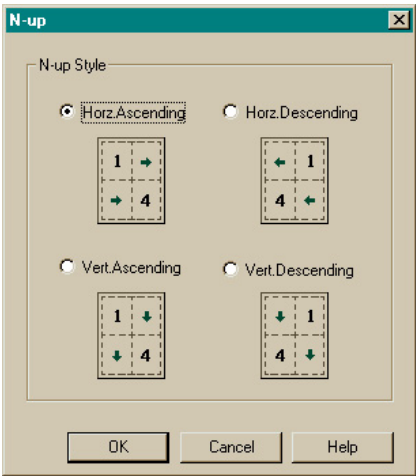

## Detail of N-up Button

This button, which is activated when N-up is set to a choice other than Off, opens the N-up Style window to allow you to select the orientation of the document pages on your media.





N-up Style Buttons

Purpose	Each N-up style option is selectable by enabling (selecting) the button located next to the style graphic. Only one style may be selected at a time.
Choices	<div>Horz. Ascending</div> <div>  </div> <div>Horz. Descending</div> <div>  </div> <div>Vert. Ascending</div> <div>  </div> <div>Vert. Descending</div> <div>  </div>
Default	Horz. Ascending

Border Line

Purpose	Allows you to place a border line between N-up page images on the printed media.
Choices	<div>Enabled (selected)—Prints a border line between N-up page images.</div> <div>Disabled—No border line is printed.</div>
Default	Disabled

## Scaling

<b>Purpose</b>	Allows you to set the magnification of your document page as it is printed on the media.
<b>Choices</b>	<b>50%–200%</b>
<b>Default</b>	100
<b>Notes</b>	The Scaling option setting is disabled (grayed-out) if N-up page layout is in effect. To enable the Scaling option, change the N-up setting to Off.

## Watermark

<b>Purpose</b>	Allows you to select the type of watermark to be printed on the media.
<b>Choices</b>	<b>(Customizable list)</b> —Selects the watermark chosen from the list.
<b>Default</b>	None
<b>Additional Choices</b>	See “First Page Only,” “In Background,” and “Edit Watermark Button” in this section.

## First Page Only Button

<b>Purpose</b>	This option setting determines whether the watermark only prints on the first page of the document or on all document pages.
<b>Choices</b>	<b>Enabled (selected)</b> —The watermark prints only on the first page of the document. <b>Disabled</b> —The watermark prints on all pages of the document.
<b>Default</b>	Disabled
<b>Notes</b>	This option is unavailable (grayed-out) until a watermark is selected.


## In Background



<b>Purpose</b>	Gives you the choice to have the watermark superimposed over the text or the text superimposed over the watermark.
<b>Choices</b>	<b>Enabled (selected)</b> —The document text is superimposed over the watermark. <b>Disabled</b> —The watermark is superimposed over the document text.
<b>Default</b>	Enabled
<b>Notes</b>	This option is unavailable (grayed-out) until a watermark is selected.

## Edit Watermark Button


Selecting this button opens the Watermark window, where you can add, delete, or modify watermarks to be printed on your media
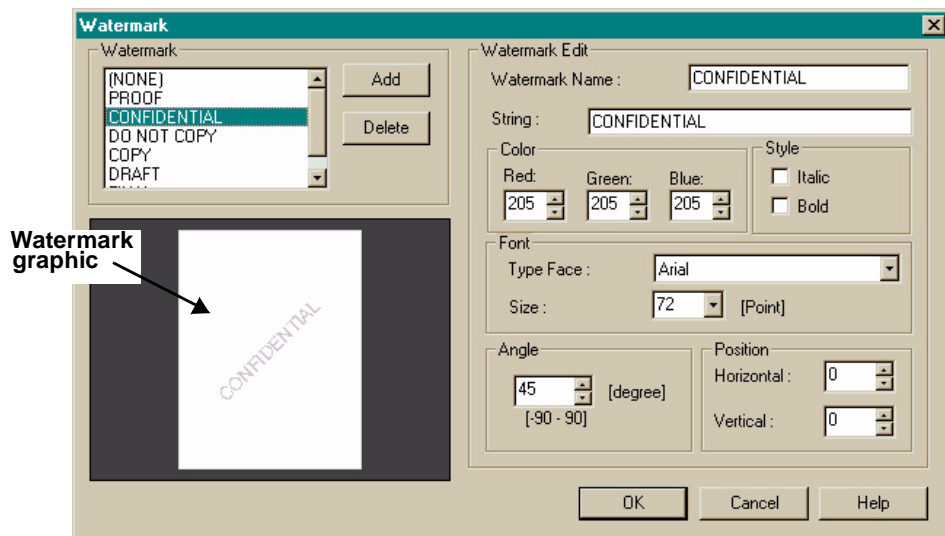
## Editing an Existing Watermark



- 1 Select the watermark you want to edit from the Watermark list.  
*When you select a watermark, it displays in the watermark graphic, and the watermark configuration details appear in the Watermark Edit fields located on the right side of the window.*
- 2 Make changes to the settings in each option as needed.  
 See “Configuring Watermark Edit Options” on page 69 for a description of Watermark Edit options.
- 3 Choose OK to save your changes and close the Watermark window or choose Cancel to disregard your changes.  
 If you choose another watermark from the list before selecting the OK button, any changes that were entered for the initial watermark selected will be lost.

### **Adding a New Watermark**

- 1 Choose the Add button.  
*When the Add button is selected the Watermark Edit fields will be filled by default values. You may choose to accept or change any of the default option values.*
- 2 Modify the settings for each Watermark Edit option as needed.  
 See “Configuring Watermark Edit Options” on page 69 for a description of Watermark Edit options.
- 3 Choose OK to save your changes and close the Watermark window or choose Cancel to disregard your changes.

### **Deleting a Watermark**

- 1 Select the watermark that you want to remove from the Watermark list.
- 2 Choose Delete.  
*The selected watermark disappears from the Watermark list.*
- 3 Repeat steps 1 and 2 for each watermark that you want to remove.
- 4 Choose OK to save your changes and close the Watermark window or choose Cancel to disregard your changes.

## Configuring Watermark Edit Options

The following configuration settings are available for watermark options located on the right-half of the Watermark window:

- **Watermark Name:** The name that identifies the watermark in the Watermark list.
- **String:** The watermark text that appears on the printed media.
- **Color:** Either type or use the scroll buttons on this control to adjust the hue of the watermark string. There is an adjustment control for red, blue, and green.
- **Style:** Gives you optional choices of bold and italic text for your watermark.
- **Font:** Allows you to specify the font and font size for your watermark. You may choose from any of the fonts installed on your computer. Changes to the font and/or font size are reflected in the watermark graphic.
- **Angle:** This option allows you to set the angle of the watermark on your media. You may select any angle between -90 and 90 degrees. Changes to the angle setting are reflected in the watermark graphic.
- **Position:** Use the horizontal and vertical controls to adjust the position of the watermark on the media. Changes to the position setting are reflected in the watermark graphic.



*To center the watermark on the media, set the horizontal and vertical position control values to 0.*

## Watermark Graphic

The Watermark Graphic is located on the lower-left side of the Watermark window. The graphic shows the media in the selected print orientation with the currently selected watermark. Changes to the Watermark Edit option settings are represented by changes to the appearance of the graphic.


## Default Button

The Default button on the Page Layout tab allows you to restore the options on this tab to their default settings.



## Configuring Image Options

The Image tab allows you to provide settings for color selection, color matching, document type, composite black, and resolution.

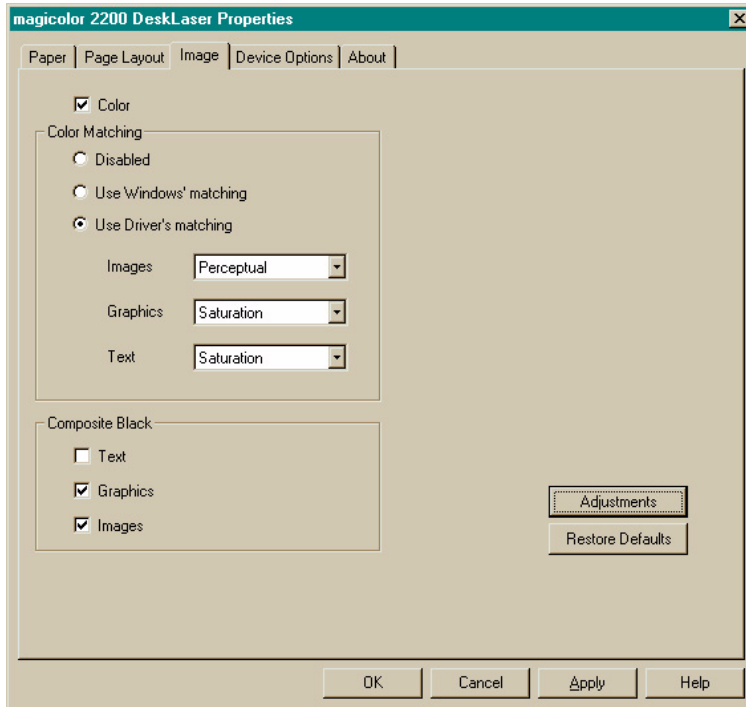

## Color

<b>Purpose</b>	Selects color or monochrome printing.
<b>Choices</b>	<b>Enabled (selected)</b> —Full color (cyan, magenta, yellow, and black) <b>Disabled</b> —Monochrome (black only)
<b>Default</b>	Enabled (selected)
<b>Notes</b>	The Disabled setting is designed only for text and grayscale graphics. If Color is disabled, the Composite Black settings are not available (grayed-out).

## Color Match


<b>Purpose</b>	Selects the method for color matching.
<b>Choices</b>	<p><b>Disabled</b>—No color matching is applied by the printer driver.</p> <p><b>Use Windows' matching</b>—Applies the color matching provided by ICM-based applications (for example, PhotoShop and CorelDRAW).</p> <p><b>Use Driver's matching</b>—Uses the driver's ICC color profile files to apply color matching to bitmap objects. When selected, the drop-down list for Images, Graphics, and Text allows you to select from the following choices:</p> <p><b>Perceptual</b>—optimized for printing photographic images. Colors that are out of the printer's gamut (color range) are replaced with the closest color within the gamut. When this substitution is made, other specified colors, whether in the printer's gamut range or not, are equivalently adjusted so that the overall image appearance and contrast is maintained.</p> <p><b>Colormetric</b>—optimized for printing spot colors, such as logos and single solid colors where hue accuracy is crucial. For those colors that can't be produced on the printer, the closest color the printer can produce is substituted.</p> <p><b>Saturation</b>—optimized for printing presentation graphics, such as overhead transparencies, spot color and text, and documents requiring a high level of color saturation. With this selection, the intensity of the colors is most closely matched.</p>
<b>Default</b>	Use Driver's matching.
<b>Notes</b>	The ICC profile file (DL220012.ICM —1200x600 resolution) is located in the \WINDOWS\SYSTEM\COLOR directory (Windows Me/98/95) or in the \WINNT\SYSTEM32\SPOOL\DRIVERS\COLOR directory (Windows 2000/NT4).

# Composite Black

<b>Purpose</b>	Sets each of the three types of rendered objects (Text, Graphics, and Bitmap objects) to print in composite black (using a combination of cyan, magenta, and yellow toner), or true black (black toner only).
<b>Choices</b>	<b>Enabled</b> (checked—will print in composite black <b>Disabled</b> (not checked)—will print using true black
<b>Default</b>	Text—Disabled, will print using true black Graphics—Enabled, will print in composite black Images—Enabled, will print in composite black

# Adjustment Button

The Adjustment Button opens the Graphics window, where you can make adjustments to contrast, brightness, saturation, and sharpness.

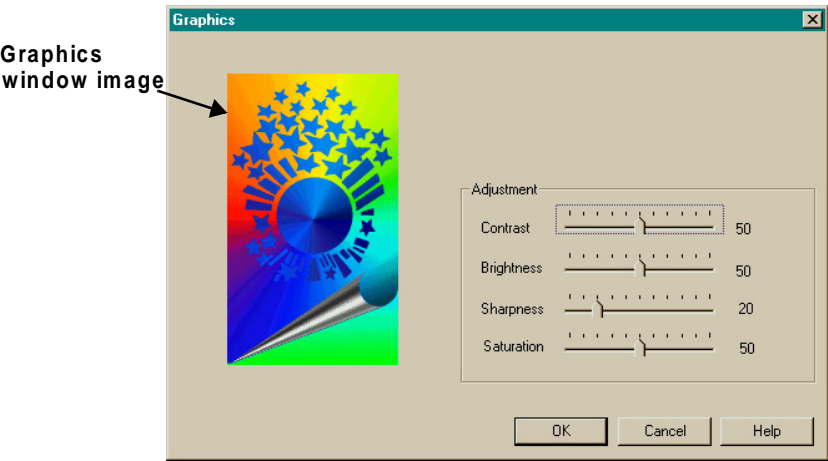



## Brightness and Contrast Adjustments

<b>Purpose</b>	Allow you to customize the brightness (lightness and darkness) and contrast of an image. Brightness—Increase for a lighter print; decrease for darker. Contrast—Increase for higher contrast print; decrease for lower contrast.
<b>Choices</b>	<b>0%-100%</b>
<b>Default</b>	The center setting (50%) on each slider bar.
<b>Notes</b>	The settings on the slider bars can be changed using keyboard arrow keys.

## Saturation and Sharpness Adjustments

<b>Purpose</b>	Allow you to customize the color saturation and sharpness of an image.
<b>Choices</b>	<b>0%-100%</b>
<b>Default</b>	Saturation: 20% Sharpness: 50%
<b>Notes</b>	The settings on the slider bars can be changed using keyboard arrow keys.

## Graphics Window Image

The image located on the left side of the Graphics window changes in appearance as adjustments are made.


## Restore Defaults Button

The Restore Defaults button on the Image tab allows you to restore the options on this tab to their default settings.



# Configuring Device Options

The Device Options tab allows you to identify which options have been installed on your printer.

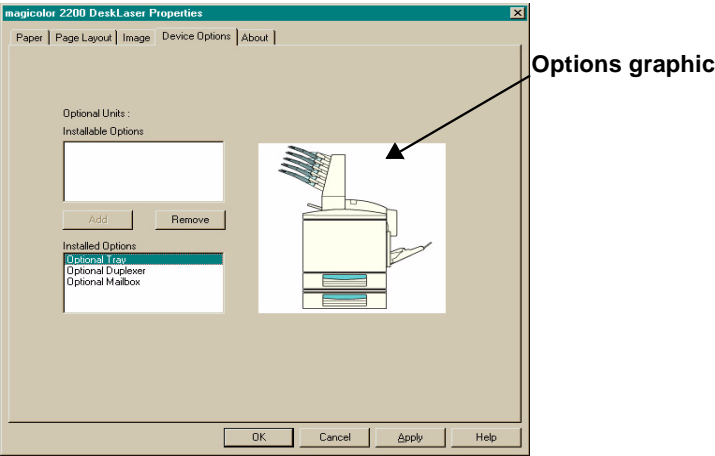

## Installable Options, Installed Option Lists, and Options Graphic


The Installable Options list displays all printer options that are available for your printer. The Installed Options list displays the current configuration that has been selected. These settings are represented by changes in the Options Graphic.

Adding an Option	Removing an Option
<div>1 Select the option you want to add from the Installable Options list.</div> <div>2 Choose Add.</div> <div>The option you selected now appears in the Installed Option list and in the Options Graphic.</div>	<div>1 Select the option you want to remove from the Installed Options list.</div> <div>2 Choose Remove.</div> <div>The option you selected now appears in the Installable Option list and is removed from the Options Graphic.</div>



## Information on the About Tab

The About tab contains the version information for your printer driver and associated files.

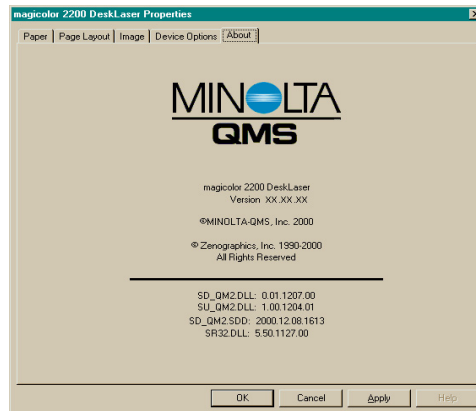

## Sharing the Printer

The magicolor 2200 DeskLaser may be shared via two communication protocols:

- Ethernet

*Refer to your Windows online help for information about printer sharing. Windows NT4/Me/98/95 users who intend to print over a network using TCP/IP need to install the Crown Print Monitor (Windows 2000 users can use the print monitor that comes with the operating system).*

- Parallel

*Refer to your Windows online help for information on sharing printers and files. See “Plug and Play Printer Driver Installation,” in the magicolor 2200 DeskLaser Installation Guide for installation instructions.*

# Using the Crown Print Monitor

The Crown Print Monitor (CROWNMON) for Windows is designed specifically for MINOLTA-QMS printers using TCP/IP protocol to transport print jobs and to access printer status information.

The Crown Print Monitor's Print Spooler (both workstation and server versions) controls the printing environment for both local and remote print jobs submitted through shared resources via TCP/IP. The Print Spooler "monitors" or "despoolers" are configured to service print jobs in a particular queue.

## Components

### ■ Status component

*This component obtains information from the printer, such as print job "go/nogo" and error or warning conditions. Status information displays in Print Manager through the print queue status dialog box. Status information comes from either the Windows Print Spooler, the Crown Print Monitor, or the printer, depending on where the job is in the printing process. See chapter 5, "Troubleshooting," for more information on status messages.*

### ■ Send component



*The Crown Print Monitor uses TCP/IP socket 35 for high-performance data transfer.*

*This component transports print jobs to a specific MINOLTA-QMS print device. When a job is sent to a print device by the Crown Print Monitor, it utilizes all allocated Windows operating system resources to transport the job. If a connection is broken while a job is being transported, the monitor gives control back to the Print Monitor Print Spooler. Any job sent to the printer while it is recovering from the break in communication is flushed from the Windows print queue.*

### ■ Configuration component

*This component configures the port name, Internet address, time delays, and problem sound alert. It consists of the Add MINOLTA-QMS Port and Configure MINOLTA-QMS Port dialog boxes. All configuration changes made via this component are automatically recorded in the Windows system registry.*

## Viewing the Crown Print Monitor

- 1 From the Start menu, choose Settings.
- 2 From the Settings menu, choose Printers.
- 3 Double-click the magicolor 2200 DeskLaser printer icon.

### Attention

---

**Do not cancel a print job in the Crown Print Monitor while the job is paused.**

---

Whenever a print job is sent to that port, its status is reported in a status window. The following table explains the status window field names:

Field Name	Explanation
Status	The current state of the print job in process. A print job either proceeds in a normal error-free state or it is in an error state. Error states can be nonvolatile like PAPER OUT or PAPER JAM or volatile like the inability to connect to a target printer (this state is displayed as Printer Not Responding).
Document Name	The document's title (it may also be the filename). Remote Downlevel Document displays when the client workstation, spooling jobs to an NT server, does not transmit complete job information. See your Microsoft Windows NT documentation for more information on this message.
Owner	The document owner.
Printed at	The time the print job is submitted to the NT Print Spooler.
Pages	The number of pages in the document.
Size	The document size.
Priority	The document priority in the queue. Range of Priorities is 1–99.





---

## *Maintaining the Printer*

---

# 4

# Introduction

Keeping the printer clean and updated with the latest system software allows you to take full advantage of printer features and capabilities. This chapter describes how to clean the printer and how to update the system software.

## Printer Care

Handle the printer with care to preserve its life. Abuse may cause damage and void your warranty. If dust and paper scraps remain on the inside or outside of the printer, printer performance and print quality will suffer, so the printer should be cleaned periodically. Keep the following guidelines in mind:

- When cleaning the printer, always turn it off (O) and unplug it. Disconnect all interface cables before cleaning inside the printer.

*If you have an optional 5-bin mailbox installed, turn the printer off first, then turn off the mailbox.*

- Either clean the printer before use, or allow time after unplugging it to allow the fuser unit to cool down.

---

### Attention

---

**The fuser unit is hot. When the top cover is opened, the fuser unit temperature drops gradually (one hour wait time).**



- 
- Be careful when cleaning the inside or removing paper jams, as the fuser unit and other internal parts may become very hot.
  - Do not place anything on the top of the printer.
  - Use a soft cloth to clean the printer.

### **WARNING!**

**Do not spill water or detergent into the printer; otherwise, the printer will be damaged and an electric shock may occur.**

---



- Never spray cleaning solution directly on the printer's surface; the spray could penetrate through the air vents of the printer and damage the internal circuits. Avoid using abrasive or corrosive solutions or solutions that contain solvents, (such as alcohol and benzene) to clean the printer.
  - Always test any cleaning solution (such as mild detergent) on a small area of your printer to check the solution's performance.
  - Never use sharp or rough implements, such as wire or plastic cleaning pads.
  - Always close the printer covers gently. Never expose the printer to vibrations.
  - Do not put a cover on the printer immediately after using it. Turn it off and wait until it cools down.
  - Do not leave the printer's covers open for any length of time, especially in well-lit places; light may damage the OPC drum cartridge.
  - Do not open the printer during printing.
  - Do not tap paper stacks on the printer.
  - Do not tilt, lubricate, or disassemble the printer.
  - Do not touch the electrical contacts, gears, or laser beam devices. Doing so may damage the printer and cause the print quality to deteriorate.
  - Keep media in the output tray at minimum level. If the media stacks too high, your printer may experience media jams and excessive media curl.
  - Lift the printer from the bottom only, using the carrying grips and the carrying bars. Make sure two people are available to lift the printer when moving it.
- When moving the printer, keep the printer level to avoid toner spillage.*
- If you get toner on your skin, wash it off with cool water and neutral detergent.

## **WARNING!**

**If you get toner in your eyes, wash it out immediately with cool water and consult a doctor. Material Safety Data Sheets (MSDS) information can be found at [www.minolta-qms.com](http://www.minolta-qms.com) (click on the Answer Base).**

- Read all caution and warning labels carefully, making sure to follow any instructions contained in them. These labels are located on the inside of the printer’s covers and the interior of the printer body.
- Make sure any parts removed during cleaning are replaced before you plug in the printer.

See *chapter 8, “Repacking the Printer,”* for printer storing and shipping instructions.

# Cleaning

You should perform a thorough cleaning every 30,000 single-sided pages or 12 months, whichever comes earlier.

Always test any cleaning solution (such as a mild detergent) on a small area of your printer to check the solution’s performance.

Use	Avoid
A soft <b>dry</b> cloth to clean the control panel	Sharp or rough implements (such as wire or plastic cleaning pads)  Any liquid
A soft <b>damp</b> cloth to clean the printer	Sharp or rough implements (such as wire or plastic cleaning pads)
Mild detergent to clean the printer	Abrasive or corrosive solutions that contain solvents (such as alcohol or benzine)

<b>This item needs cleaning...</b>	<b>After...</b>	<b>See...</b>
Duplex unit paper guides or rollers	Every 30,000 single-sided pages, or 12 months, whichever comes earlier.	<i>Maintenance Guide.</i>
Laser lens cover	Removing the waste toner pack to clean around it or to replace it.	
Paper exit rollers	Every 30,000 single-sided pages, or 12 months, whichever comes earlier.	
Printer exterior	As needed.	
Printer interior	Every 30,000 single-sided pages, or 12 months, whichever comes earlier.	

## Updating System Software

The system software in your magicolor 2200 DeskLaser is stored in flash ROM, read-only memory that can be erased and rewritten to “in a flash.” This allows you to update the system software through the printer interface without opening up the printer and installing new PROMs. The system software is updated by sending a specified file to the printer.

### Downloading Methods

You can use Ethernet TCP/IP or a parallel connection to download the system file to the printer.

<b>Download Method</b>	<b>See</b>
Ethernet TCP/IP	“Downloading the System File via Ethernet (TCP/IP)” on page 84.
Parallel	“Downloading the System File via Parallel” on page 87.

### System File

To perform an update you need to download a system file to your printer. The system file filename identifies the system version number and ends with an `.img` filename extension. The printer must remain inactive during the download process.


## Downloading the System File via Ethernet (TCP/IP)

First, you need to make sure that the printer is on and accessible through your network.

1 From your PC:


- a From the Start menu choose Run...
- b Type command.↵
- c In the DOS window, type  
ping *ipaddress*↵ (for example, ping 161.33.128.5↵)

*If the printer connection is working correctly, your screen will display printer information similar to the following:*

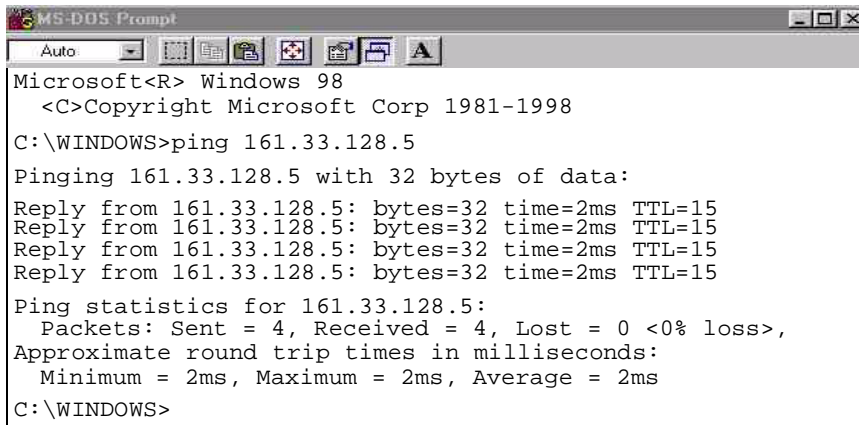


```
MS-DOS Prompt
Auto
Microsoft<R> Windows 98
<C>Copyright Microsoft Corp 1981-1998
C:\WINDOWS>ping 161.33.128.5
Pinging 161.33.128.5 with 32 bytes of data:
Reply from 161.33.128.5: bytes=32 time=2ms TTL=15
Reply from 161.33.128.5: bytes=32 time=2ms TTL=15
Reply from 161.33.128.5: bytes=32 time=2ms TTL=15
Reply from 161.33.128.5: bytes=32 time=2ms TTL=15
Ping statistics for 161.33.128.5:
    Packets: Sent = 4, Received = 4, Lost = 0 <0% loss>,
    Approximate round trip times in milliseconds:
        Minimum = 2ms, Maximum = 2ms, Average = 2ms
C:\WINDOWS>
```

*If your screen displays information similar to the following, you may have bad network cabling or connectors attached to the printer. Check the cabling and connectors.*

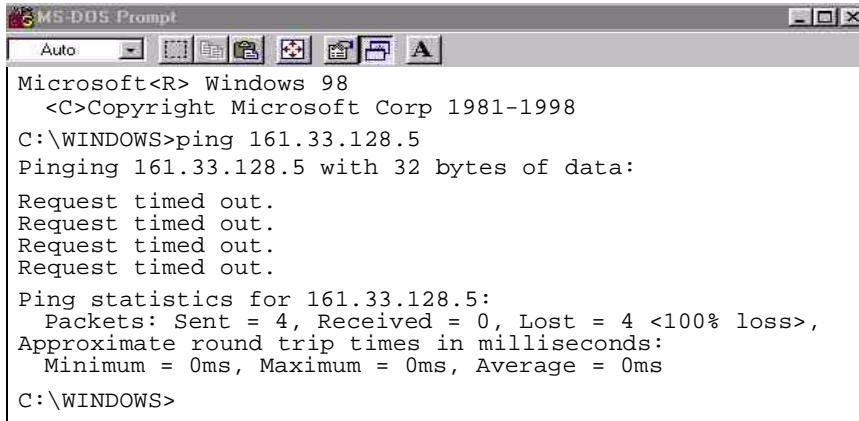

```
Microsoft<R> Windows 98
<C>Copyright Microsoft Corp 1981-1998
C:\WINDOWS>ping 161.33.128.5
Pinging 161.33.128.5 with 32 bytes of data:
Request timed out.
Request timed out.
Request timed out.
Request timed out.
Ping statistics for 161.33.128.5:
    Packets: Sent = 4, Received = 0, Lost = 4 <100% loss>,
    Approximate round trip times in milliseconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\WINDOWS>
```

*Incorrect IP addresses can cause errors similar to ones shown in the following:*

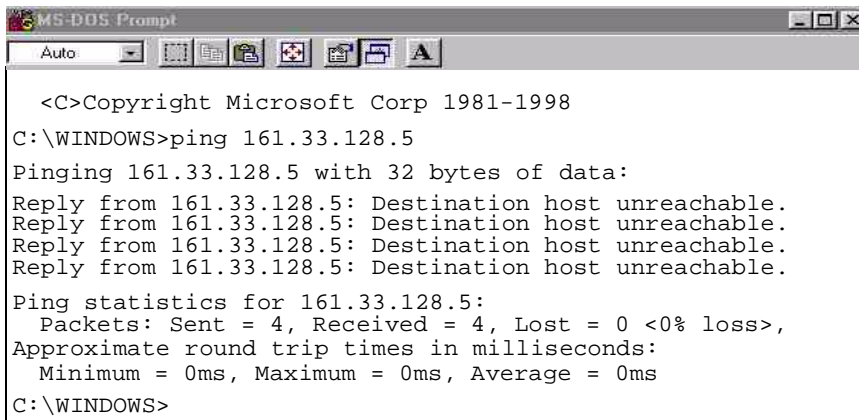

```
<C>Copyright Microsoft Corp 1981-1998
C:\WINDOWS>ping 161.33.128.5
Pinging 161.33.128.5 with 32 bytes of data:
Reply from 161.33.128.5: Destination host unreachable.
Reply from 161.33.128.5: Destination host unreachable.
Reply from 161.33.128.5: Destination host unreachable.
Reply from 161.33.128.5: Destination host unreachable.
Ping statistics for 161.33.128.5:
    Packets: Sent = 4, Received = 4, Lost = 0 <0% loss>,
    Approximate round trip times in milliseconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\WINDOWS>
```

*After you've determined that your printer connection is working correctly, you need to ftp and "put" the new system file to the printer.*



*Make sure that the printer's message window displays "IDLE" before continuing this procedure.*

- 2 Change to the directory where the system file is located.

*For example, assume the file is located on magicolor 2200 DeskLaser CD-ROM under the directory "loadcode" and that the drive letter for the CD-ROM is E. To change to the directory where the file is located you would use the following sequence of commands.*

```
C:\Windows\Desktop> e:↵
```

```
E:> cd loadcode↵
```

- 3 At a command prompt, type

```
ftp ipaddress↵ (for example, ftp 161.33.128.5↵)
```

- 4 When prompted for a user name and password, press Enter for both.

*An ftp> prompt displays.*



*If a message displays denoting invalid password, contact your system administrator. Otherwise, continue.*

- 5 At the ftp> prompt, change to binary mode by typing

```
bin↵
```

## **WARNING!**

**Interrupting the download process may corrupt your printer's operating system. Do not attempt to stop the download or use the printer's control panel after the download process is started. After the file download, allow the printer to automatically reboot on its own to complete the process. Do not manually reboot the printer.**


---

6 Now you need to “put” the system file. Type

```
put x↵
```

where *x* is the name of the system file.

The downloading process takes several minutes.

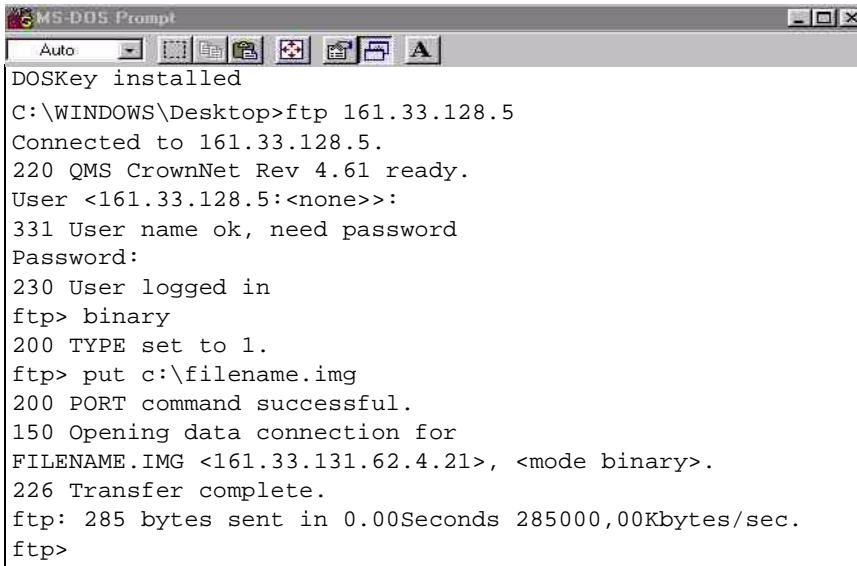

```
MS-DOS Prompt
Auto
DOSKey installed
C:\WINDOWS\Desktop>ftp 161.33.128.5
Connected to 161.33.128.5.
220 QMS CrownNet Rev 4.61 ready.
User <161.33.128.5:<none>>:
331 User name ok, need password
Password:
230 User logged in
ftp> binary
200 TYPE set to 1.
ftp> put c:\filename.img
200 PORT command successful.
150 Opening data connection for
FILENAME.IMG <161.33.131.62.4.21>, <mode binary>.
226 Transfer complete.
ftp: 285 bytes sent in 0.00Seconds 285000,00Kbytes/sec.
ftp>
```

7 At the ftp> prompt, end the ftp session by typing  
quit↵

## Downloading the System File via Parallel

Use the following procedure for installing a system file via the parallel port.

### Attention

**Connect the parallel port of the printer to your computer prior to turning on the printer and computer. Turn the printer on first, then the computer.**

- 1 Turn on the printer.
- 2 From the Start menu choose Run...

3 Type command.↓

4 At the command line, change to the directory where the system file is located

*For example, assume the file is located on magicolor 2200 Upgrade CD-ROM under the directory "loadcode" and that the drive letter for the CD-ROM is E. To change to the directory where the file is located you would use the following sequence of commands.*

```
C:\Windows\Desktop> e:↓
```

```
E:> cd loadcode↓
```

## **WARNING!**

**Interrupting the download process may corrupt your printer's operating system. Do not attempt to stop the download or use the printer's control panel after the download process is started. After the file download, allow the printer to automatically reboot on its own to complete the process. Do not manually reboot the printer.**

5 Copy the system file to the parallel port

```
copy /b x lptx:↓
```

where *x* is the filename of the system file and *y* is the lpt port number being used.  
The downloading process takes several minutes.

## **Future Updates**

You can find printer software for your printer on our Internet website. Go to <http://www.minolta-qms.com/support>, and then select your printer from the list. The download link is located under the heading "Printer-Specific Firmware."





---

***Troubleshooting***

---

**5**

# Introduction

This chapter provides information to aid you in resolving printer problems you may encounter, or at least guide you to the proper sources for help.

## Printing a Sample Page

Print a sample page to verify the printer is printing correctly.

Press Key	(Until) Display Reads
Online	IDLE (and online LED is off)
Menu	LANGUAGE
Next ( ► )	SAMPLE PAGE
Select	*YES
Select	IDLE (and online LED is on)

## Preventing Media Jams

Make sure that...	Avoid...
Media matches the printer specifications	Media that is folded, wrinkled, or excessively curled
Media is flat, especially on the leading edge	Double feeding ( <i>remove the media and fan the sheets—they may be sticking together</i> )
The printer is on a hard, flat, level surface	Fanning transparencies since this causes static
You have the correct media type selected if you're printing on envelopes, labels, thick stock, or transparencies	Loading more than one type/size/weight of media in a tray at the same time
You store media in a dry location away from moisture and humidity	Overfilling the media <b>input</b> trays
You always adjust the media width regulation guides in the multipurpose tray <i>after</i> inserting the media ( <i>a guide that is not properly adjusted can cause poor print quality, paper jams, or printer damage</i> )	Allowing the <b>output</b> tray to overfill ( <i>the face-down output tray has a 500-sheet capacity—jamming may occur if you allow media to accumulate more than 500 sheets at a time</i> )

Also make sure that you remove transparencies from the output tray immediately to avoid static buildup, and that you load the media (for single-sided pages) printing-side up in the upper or optional trays or printing-side down in the multipurpose tray.



*Many manufacturers place an arrow on the end of the wrapper to indicate the printing side.*

## Automatic Jam Recovery


The magicolor 2200 DeskLaser provides automatic jam recovery (when enabled through the Engine/Error Recovery menu). After you remove any jammed media, printing automatically resumes from the page the printer stopped at when the jam occurred.



*For automatic jam recovery to work, it is necessary to leave the printer turned on when you remove the jammed media.*

# Understanding the Media Path

Understanding the printer's media path will help you locate media jams.

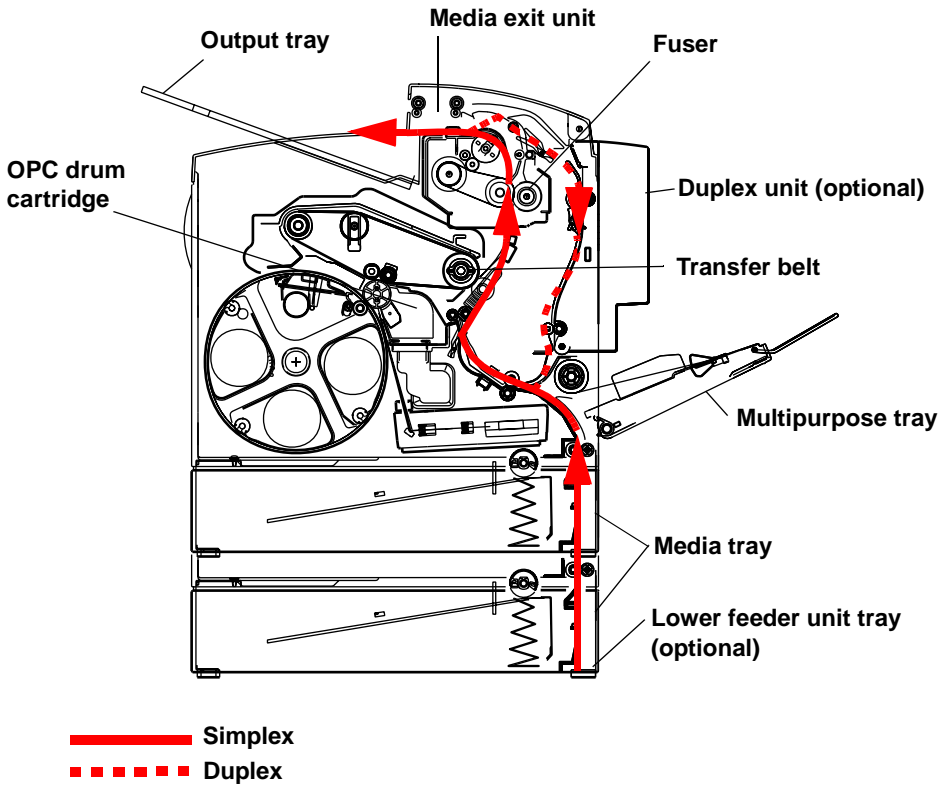

## Media Tray

The media tray(s) is (are) located at the bottom front of the printer. The media is picked from the tray, passed under the OPC drum cartridge and the transfer belt, passed through the fuser, and delivered via the paper exit unit to the output tray on top of the printer.